



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


Aprilia RS660 Crash Protection

Installation Instructions




## Kit Contents PRN015288

- (A) 1 x Bobbin Bracket R/H
- (B) 1 x Bobbin Bracket L/H
- (C) 1 x Bracket Brace R/H
- (D) 1 x Bracket Brace L/H
- (E) 1 x Bobbin Shim
- (F) 1 x M10 x 30 Caphead
- (G) 1 x M10 x 50 Caphead
- (H) 1 x M10 x 65 Caphead
- (I) 1 x M10 x 80 Caphead
- (J) 2 x M12 x 90 x 1.25mm Caphead
- (K) 2 x M12 Washers
- (L) 2 x Bobbin Spacers
- (M) 2 x Poly Washers
- (N) 2 x Main Tail Tidy
- (O) 2 x Bobbin Heads
- (P) 4 x M5 x 15 Countersunk Screws

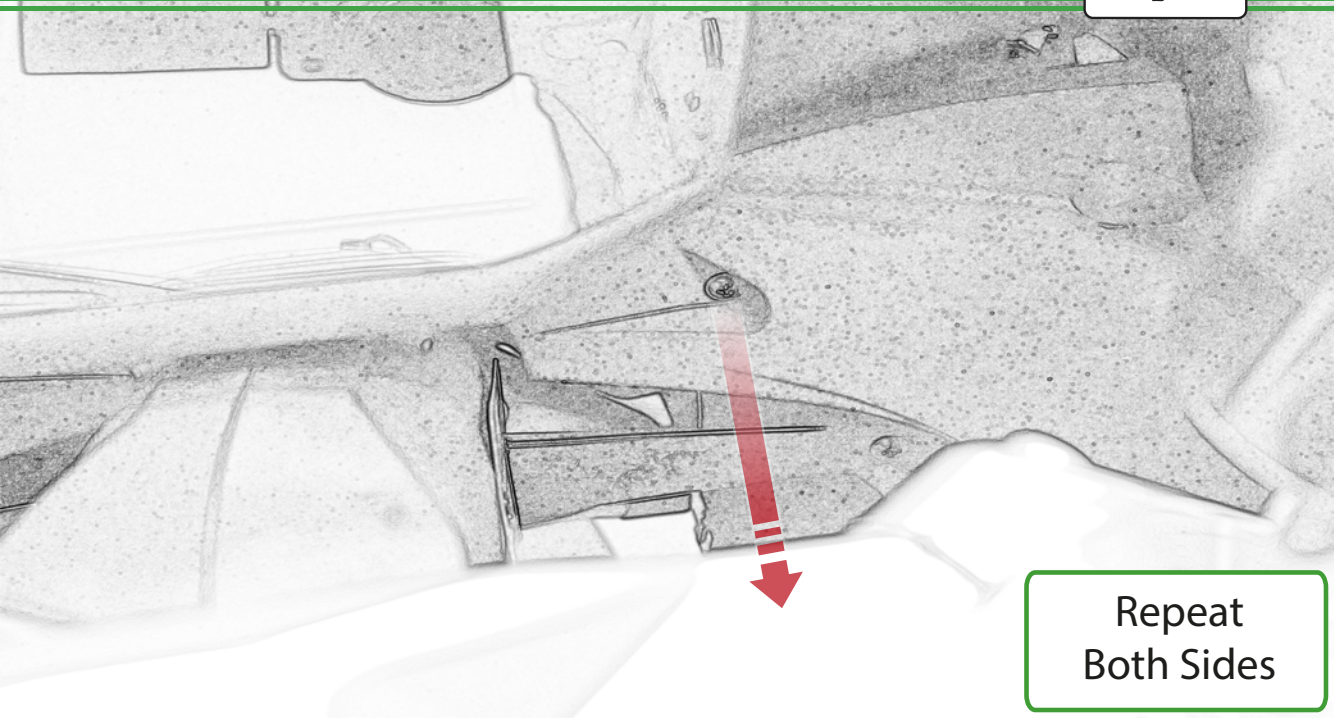


Repeat  
Both Sides

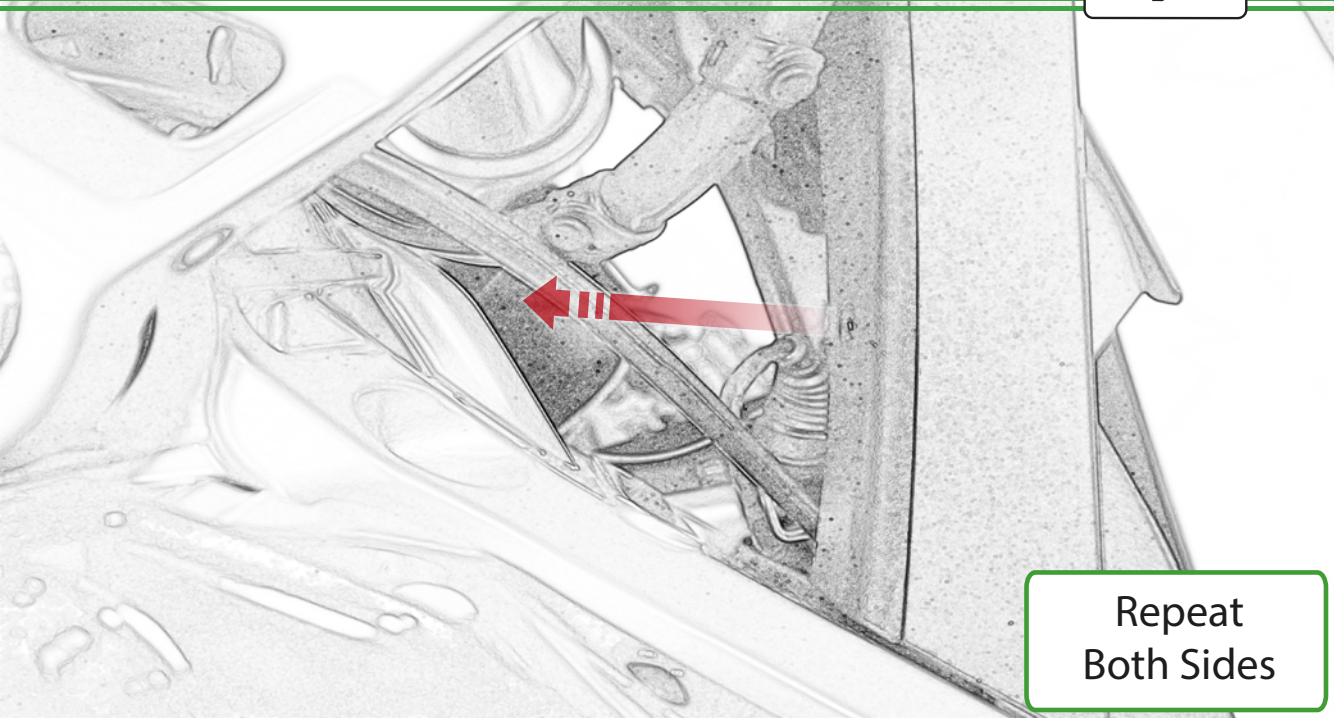


Repeat  
Both Sides




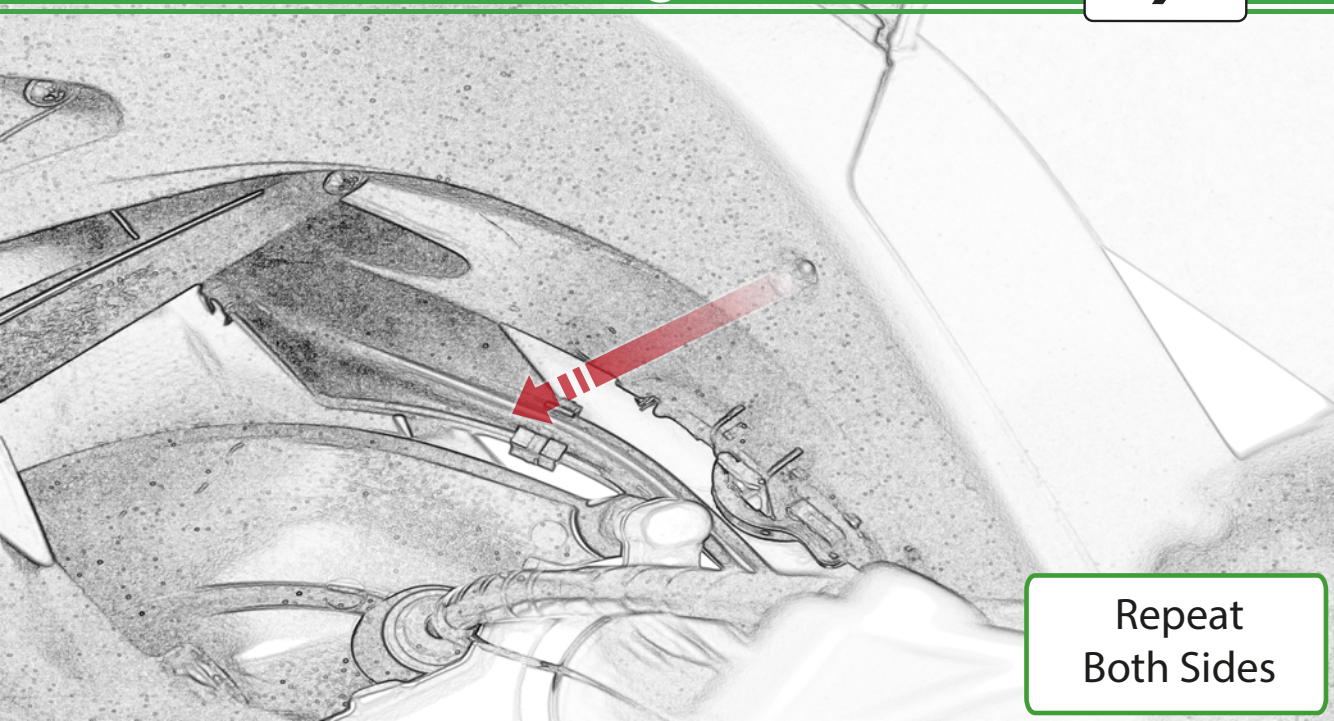


Repeat  
Both Sides

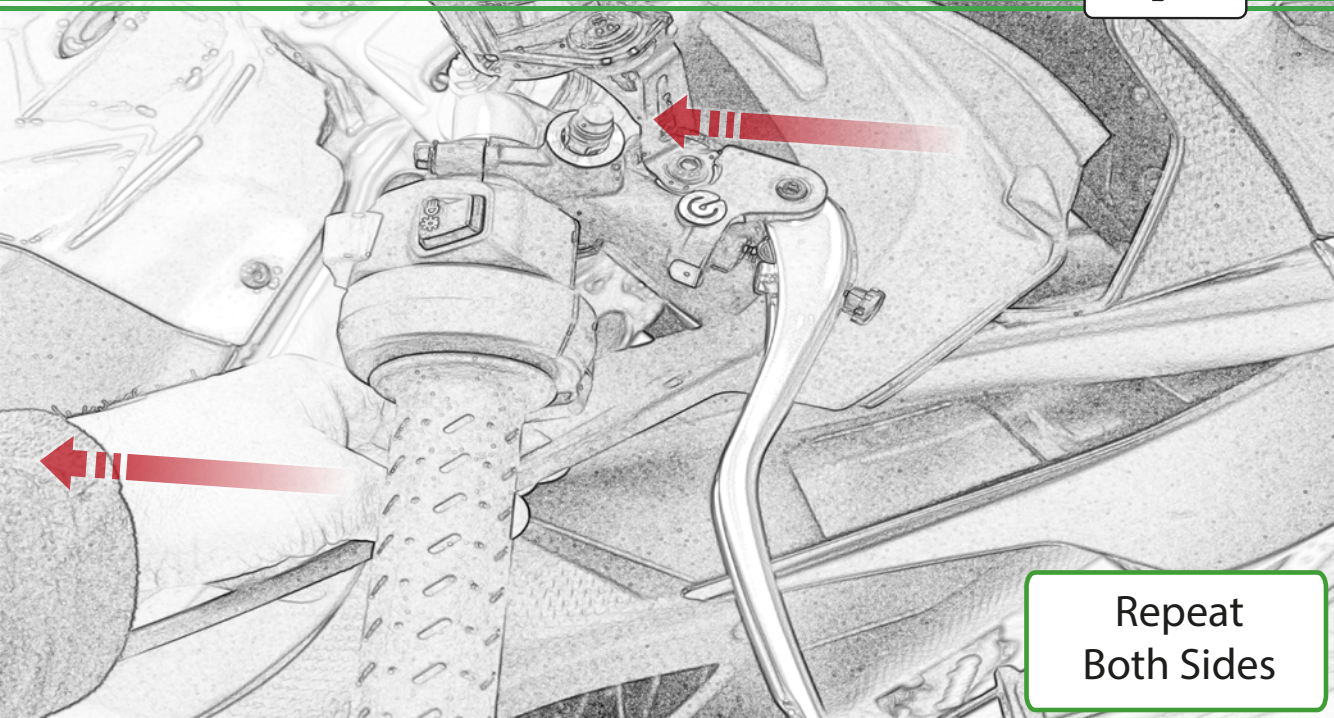

Repeat  
Both Sides

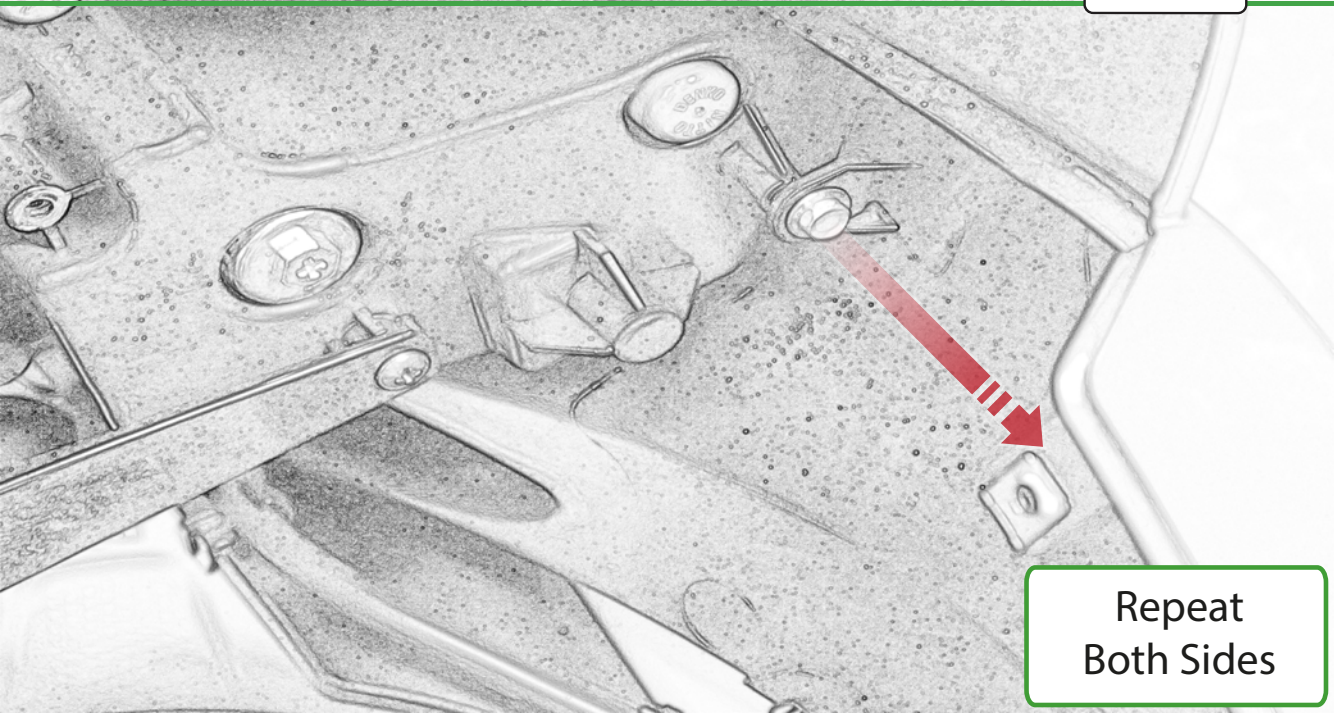


Repeat  
Both Sides

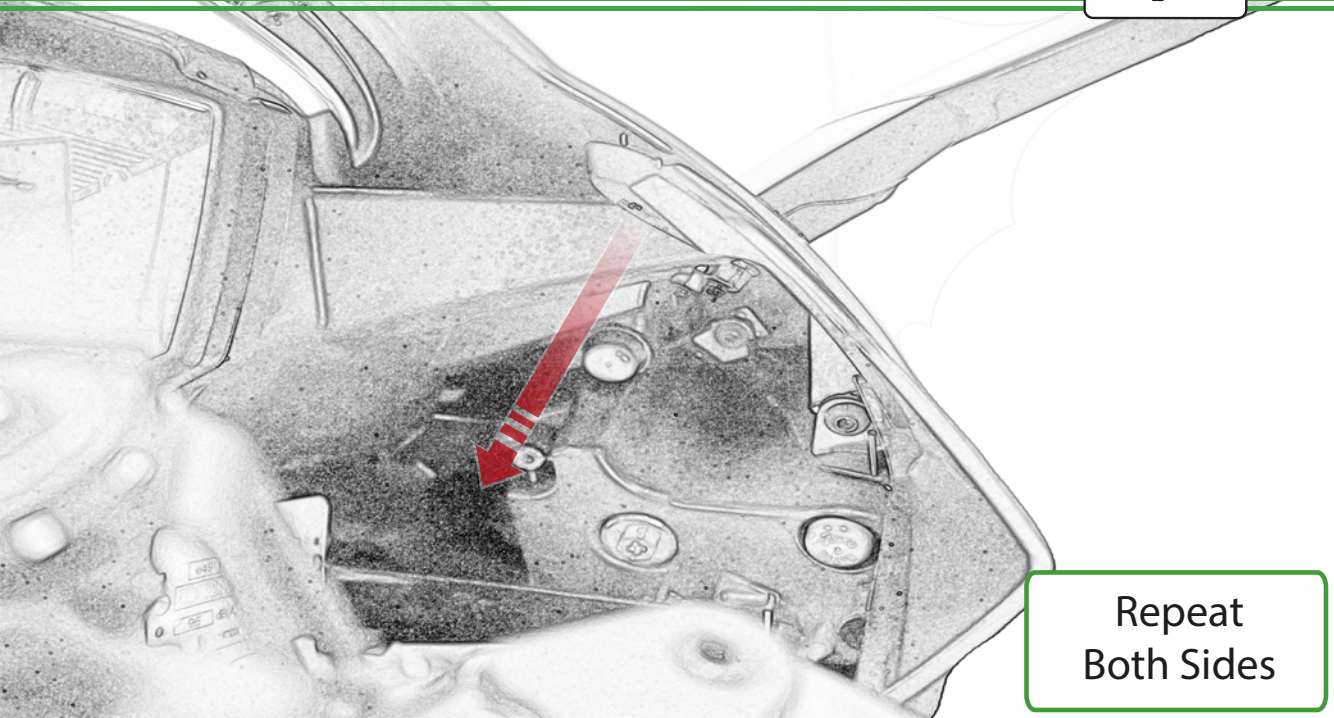


Repeat  
Both Sides




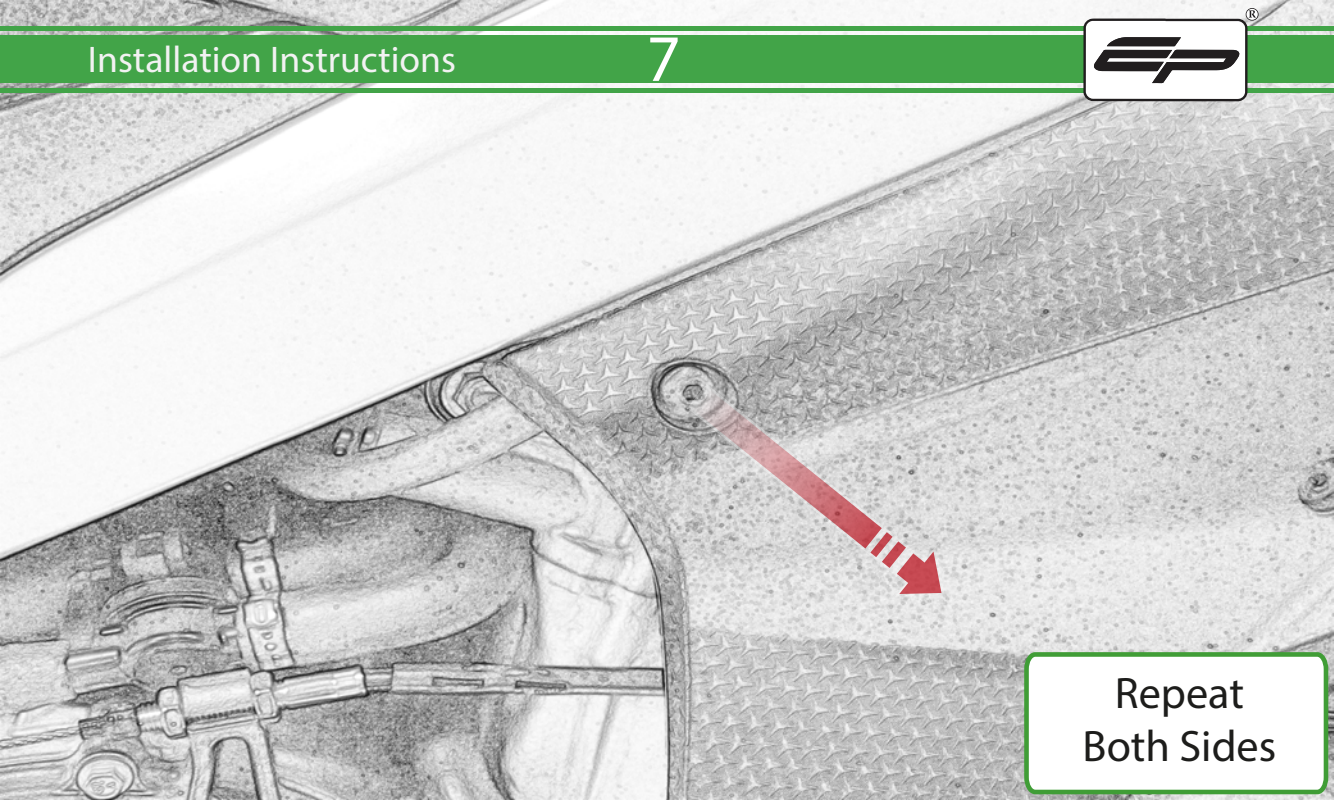

Repeat  
Both Sides

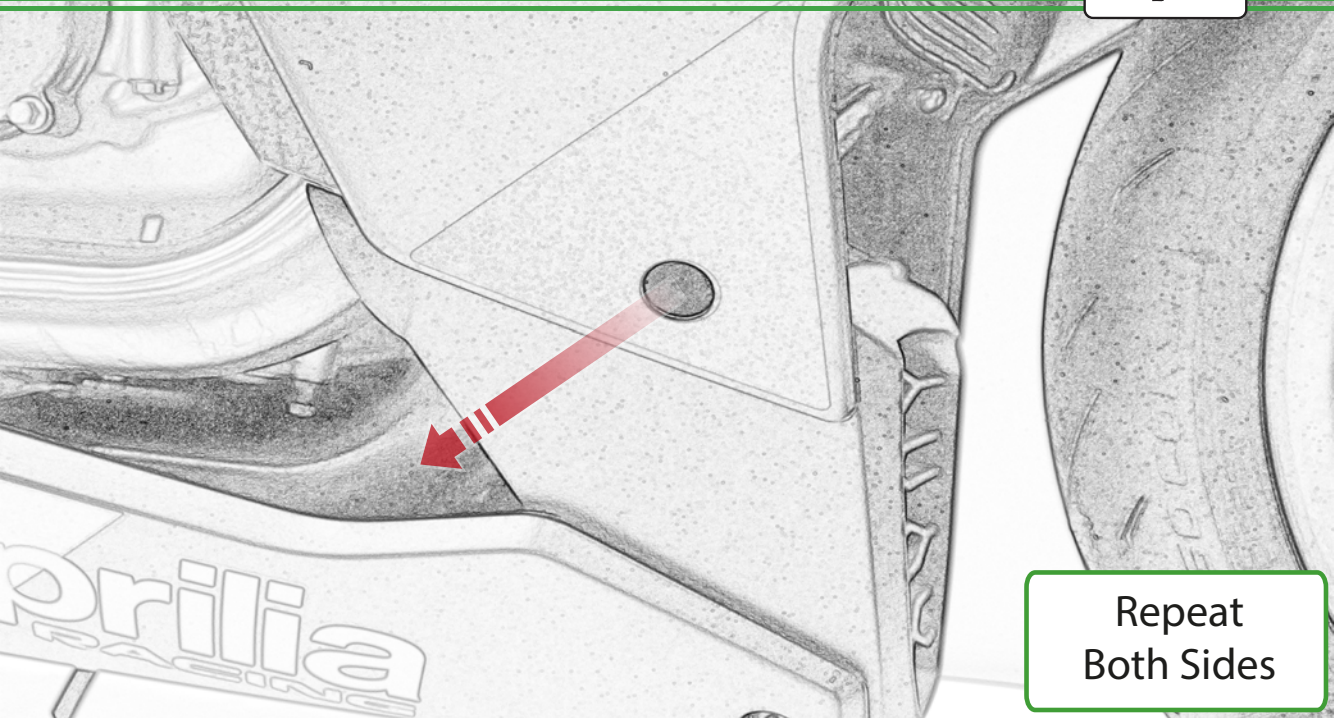


Repeat  
Both Sides

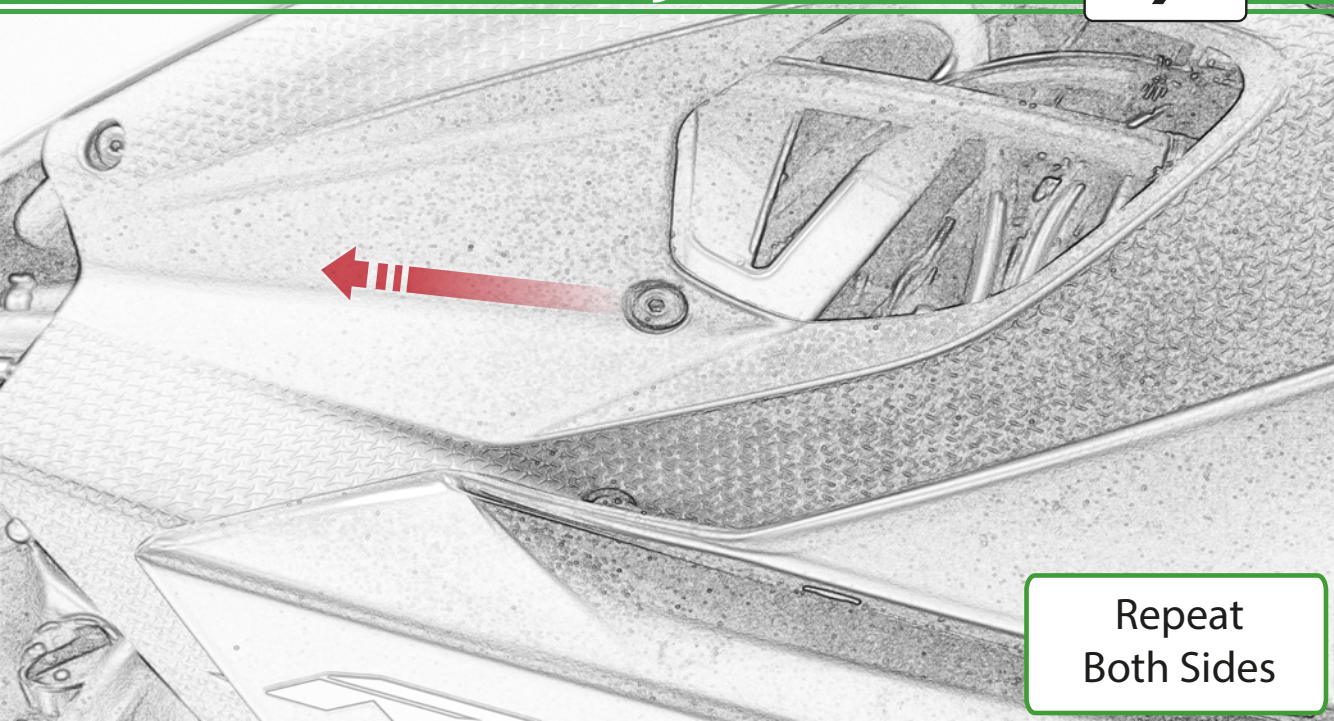

Repeat  
Both Sides



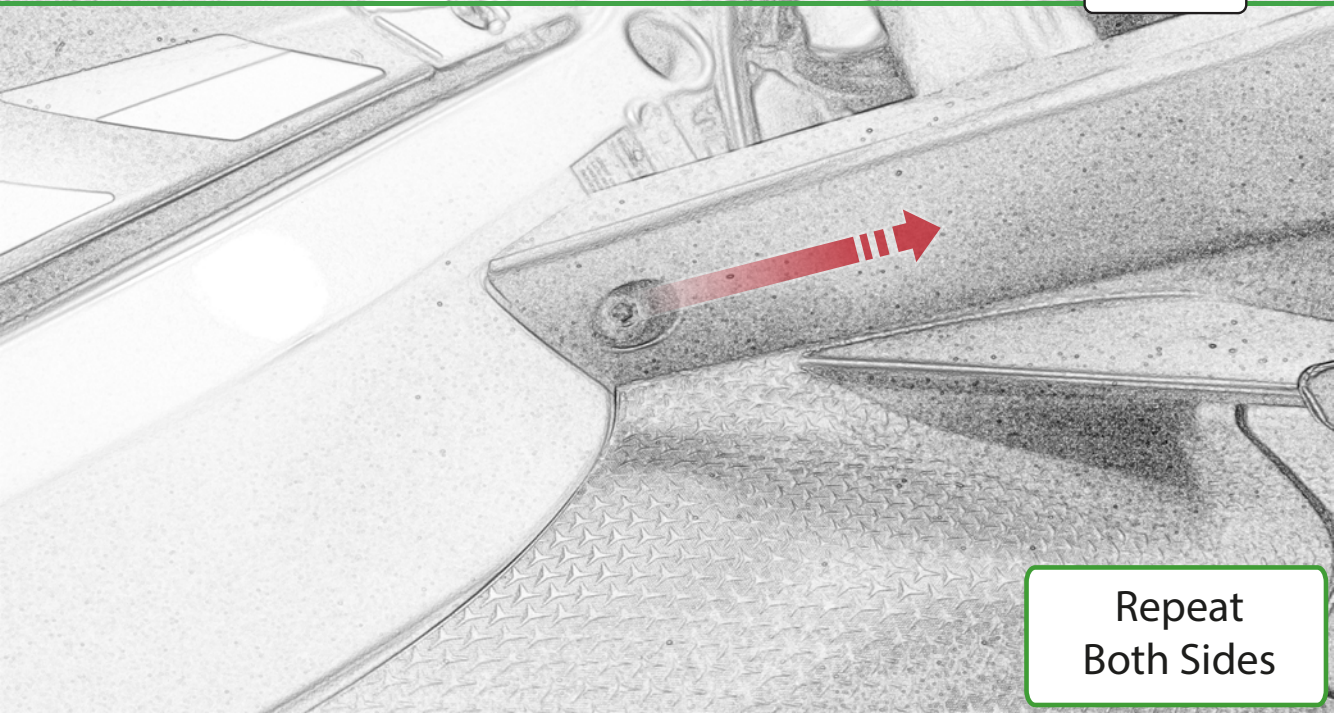


Repeat  
Both Sides







Repeat  
Both Sides

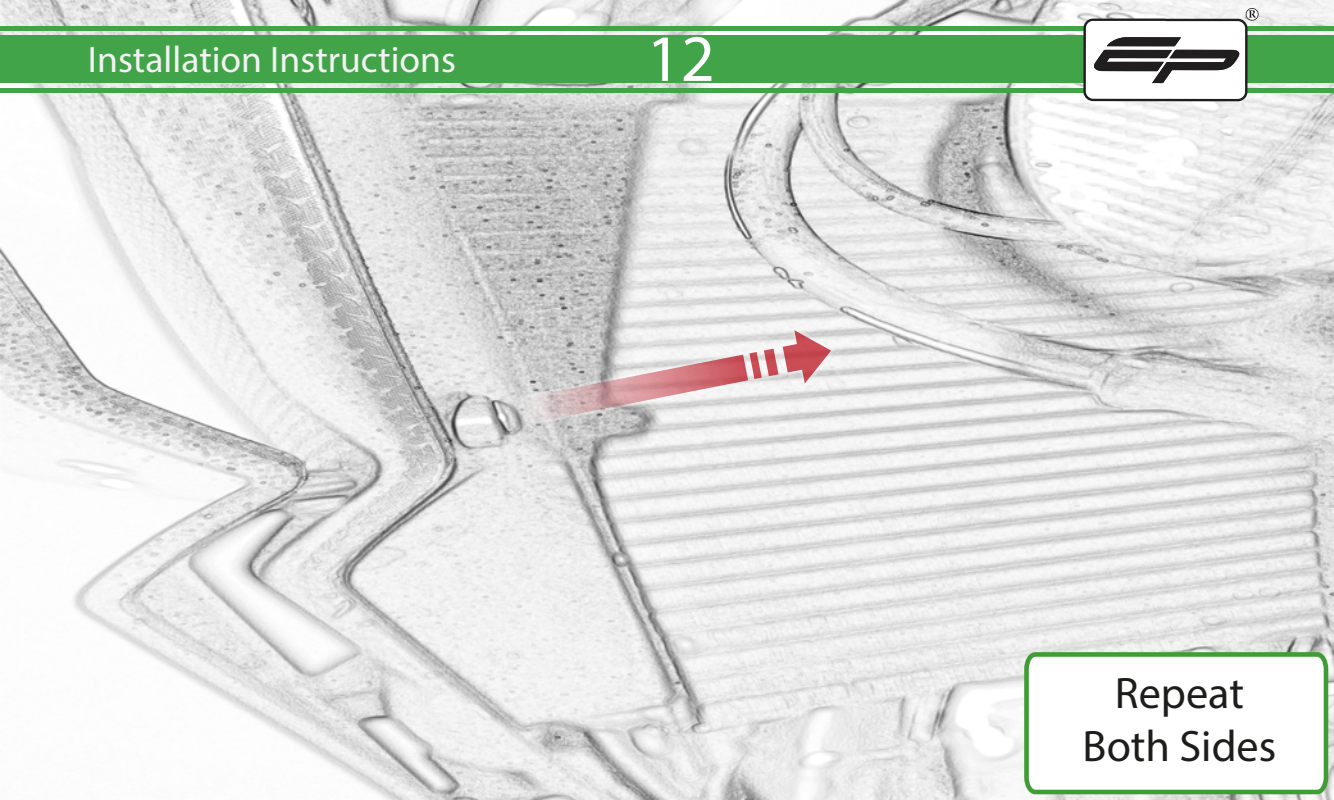


Repeat  
Both Sides

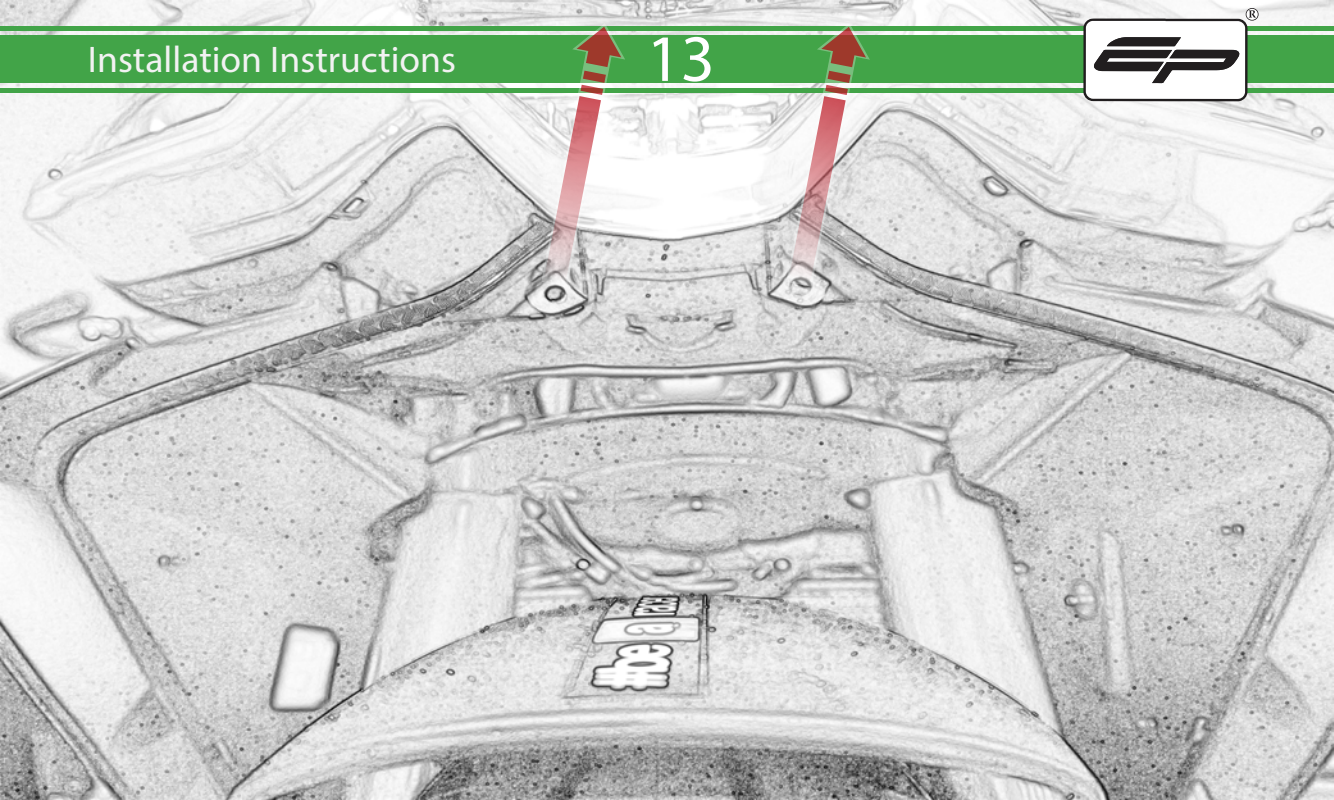


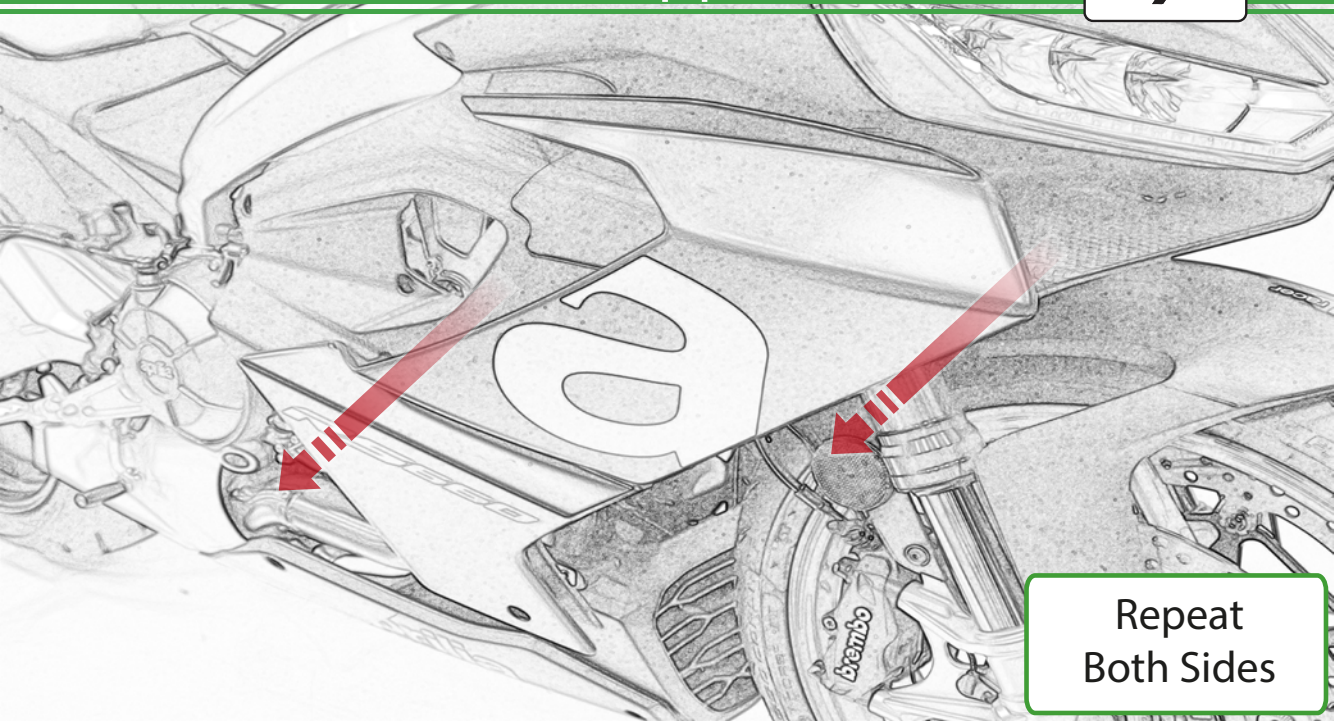


Repeat  
Both Sides




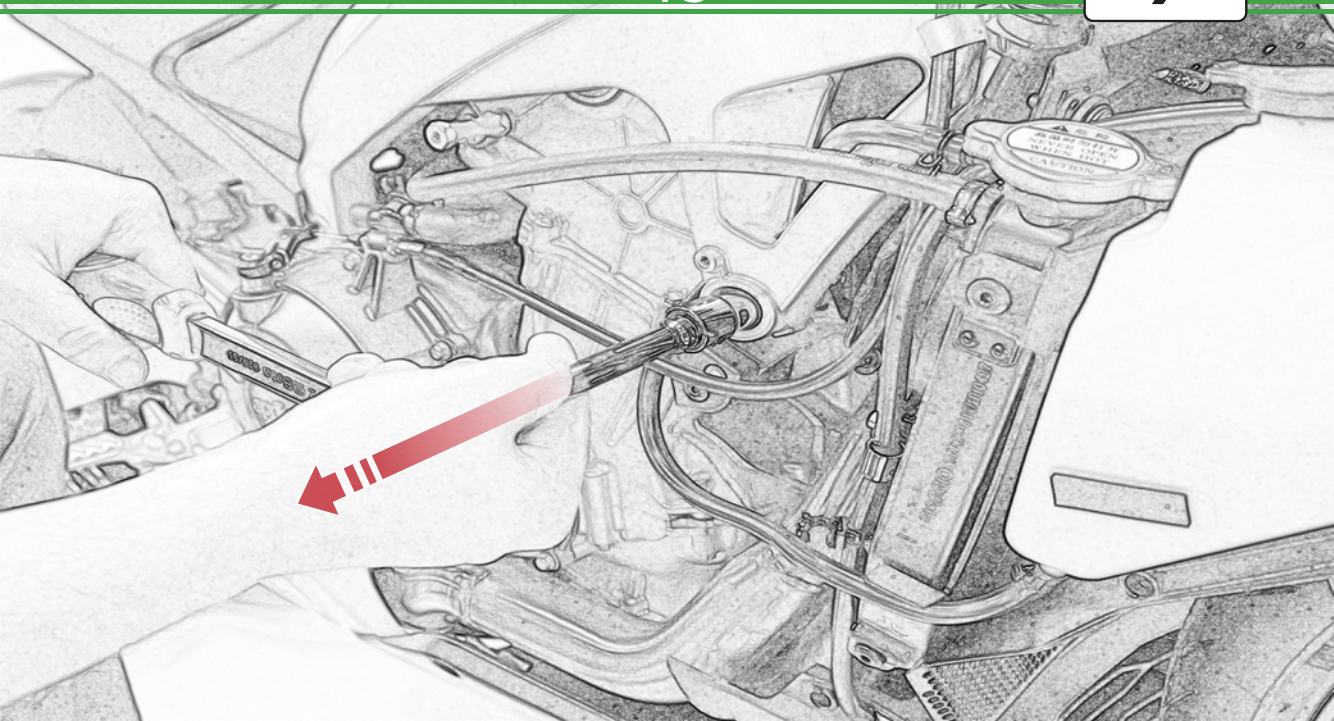

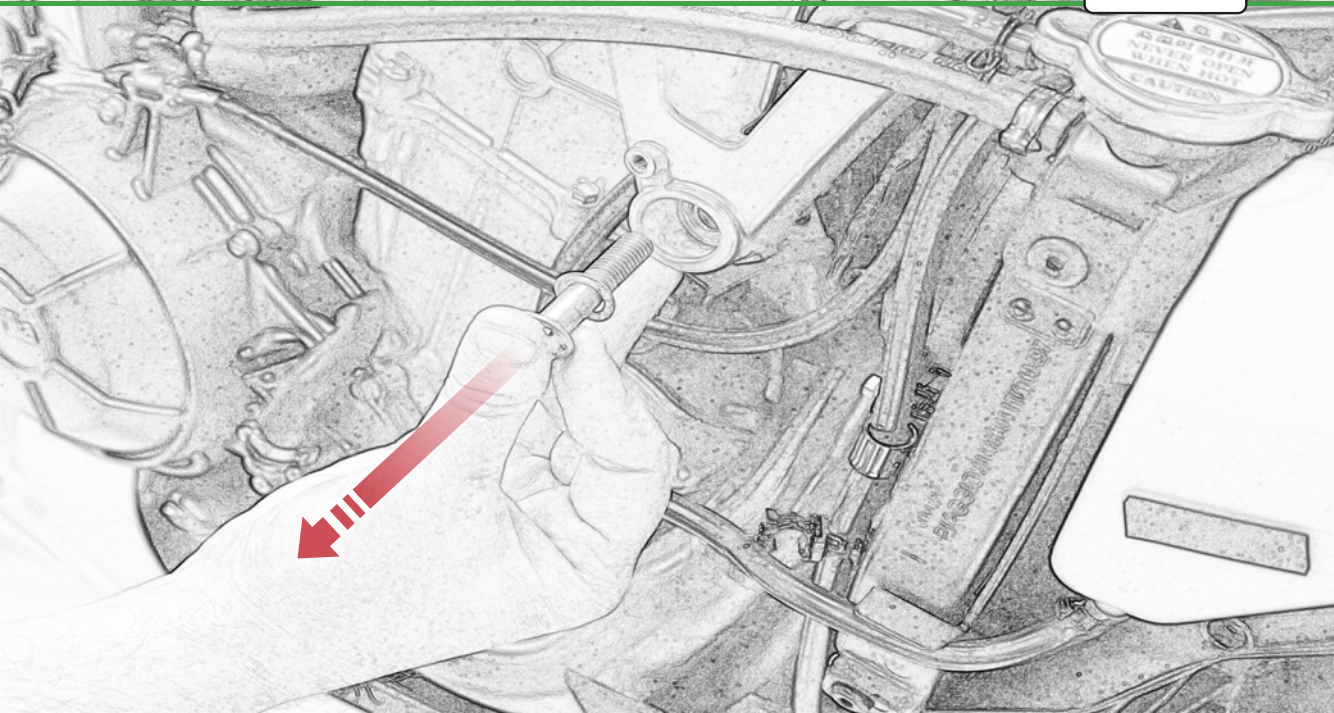


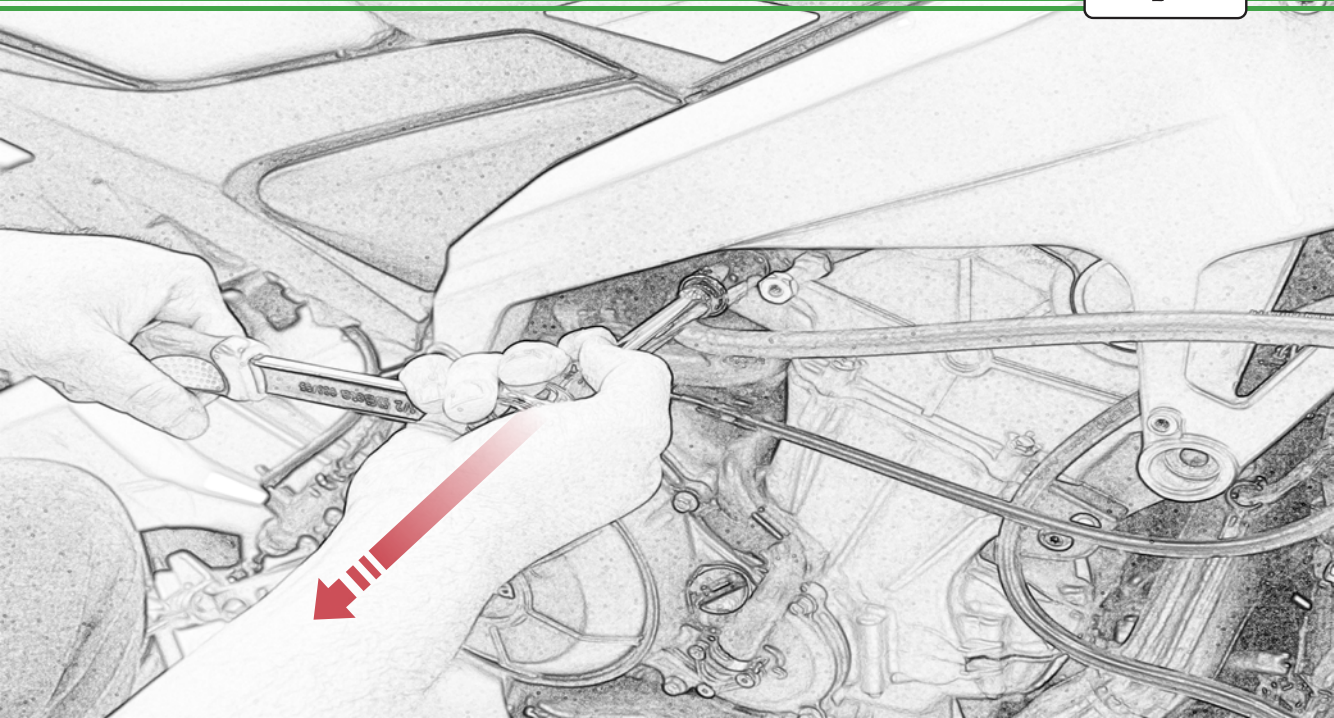




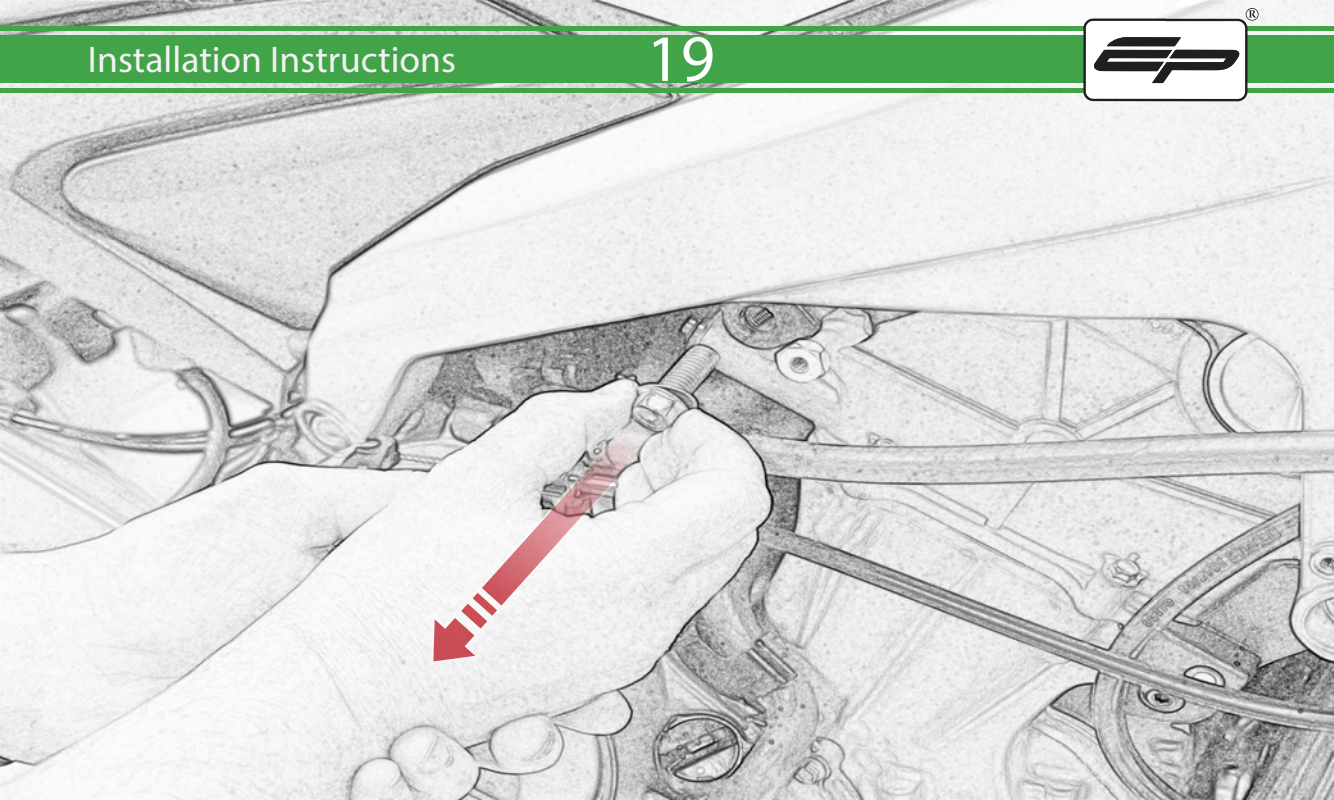




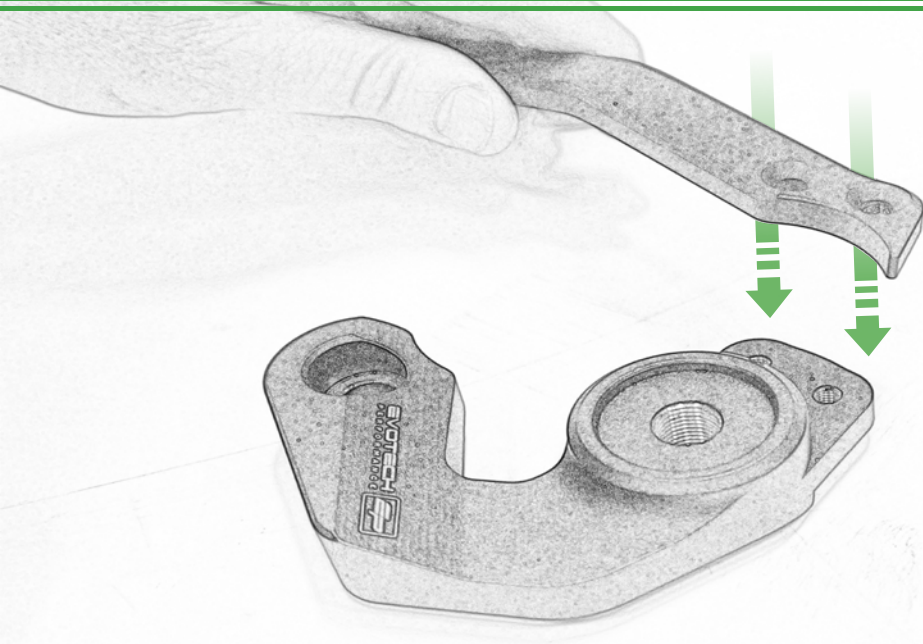




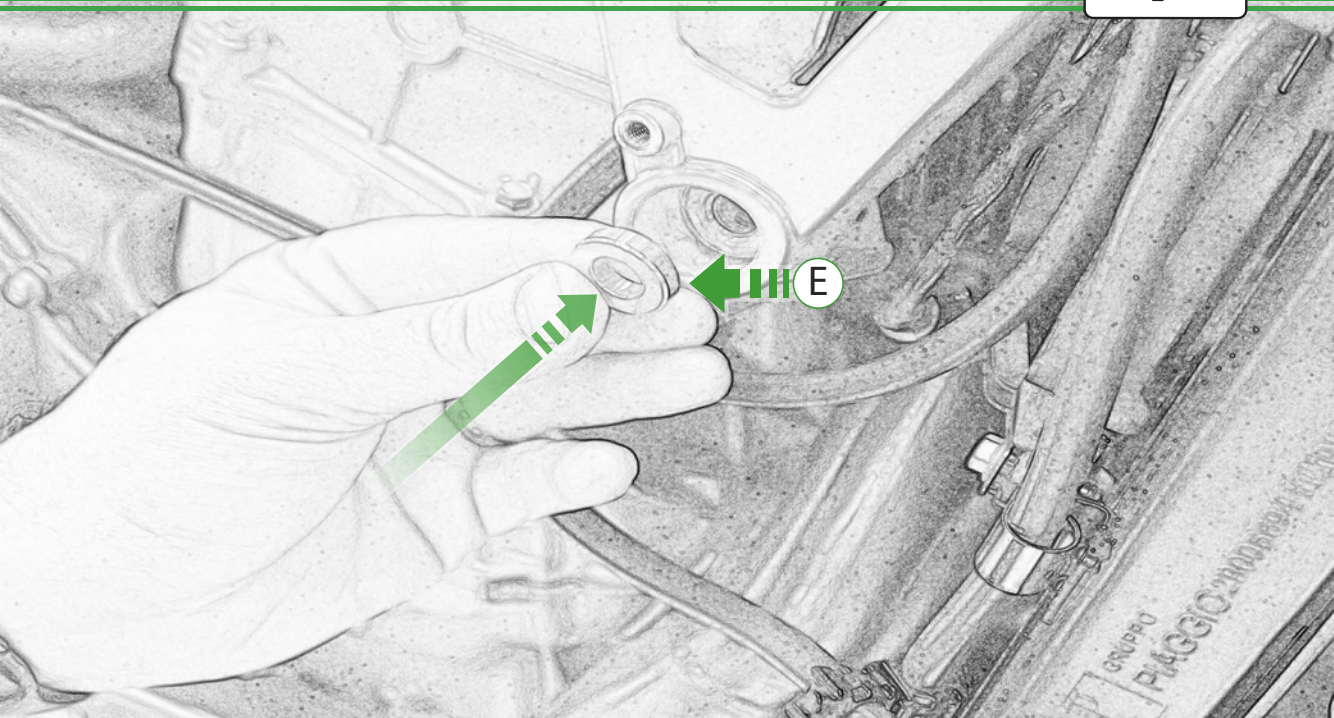


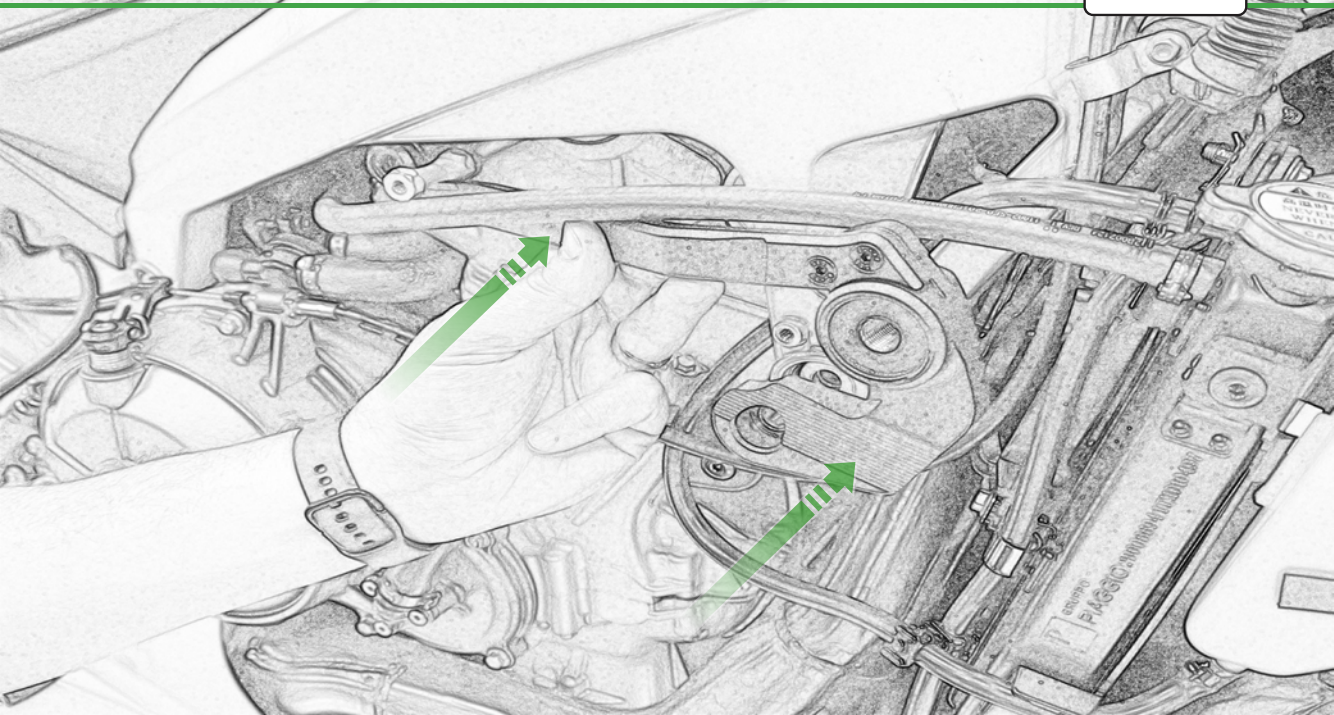




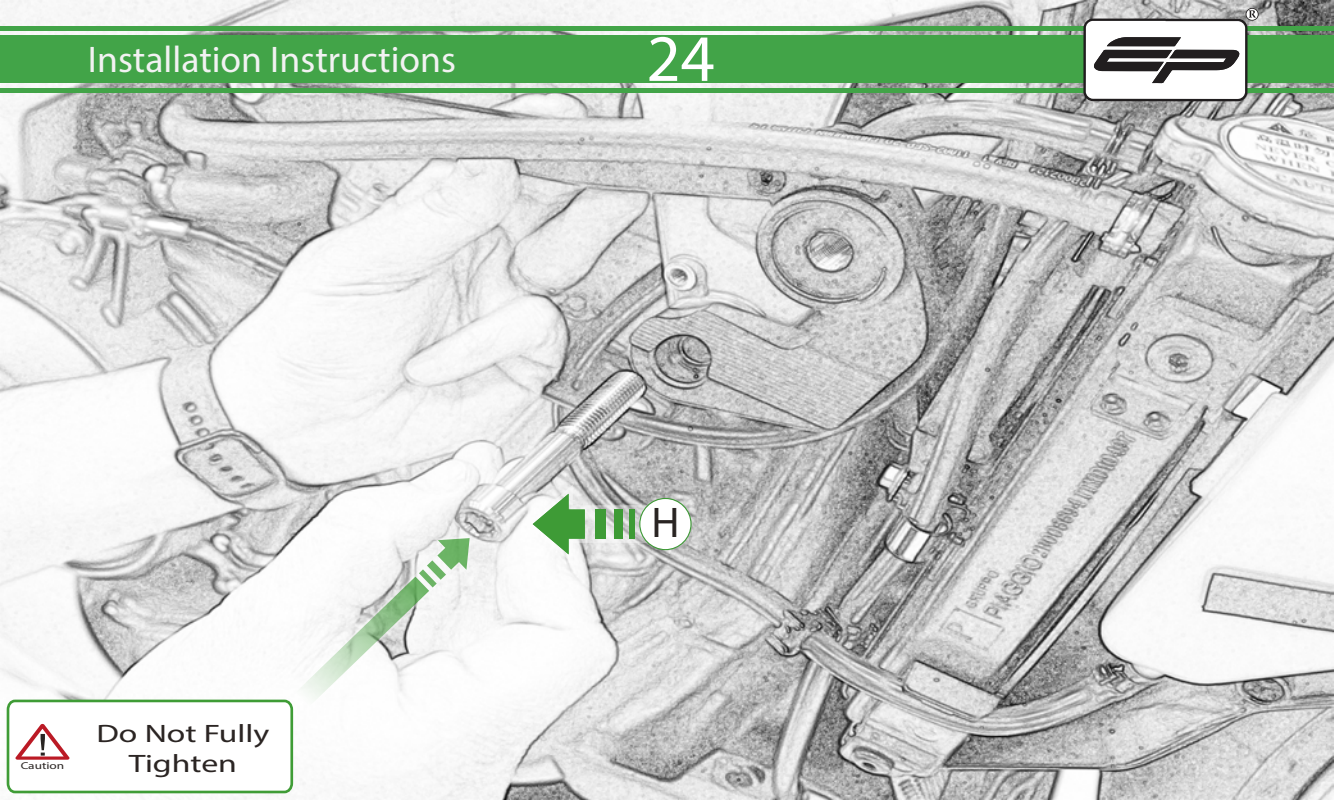

Do Not Fully  
Tighten

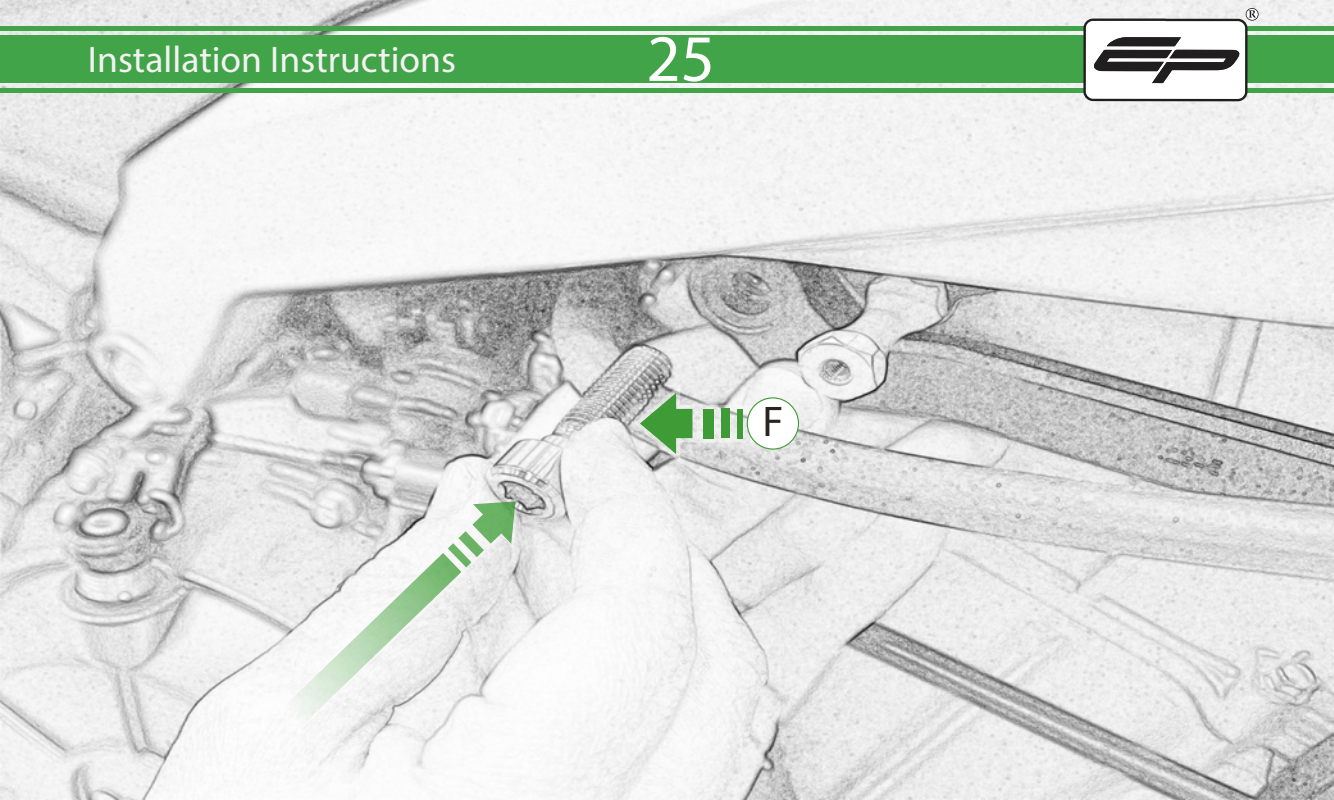

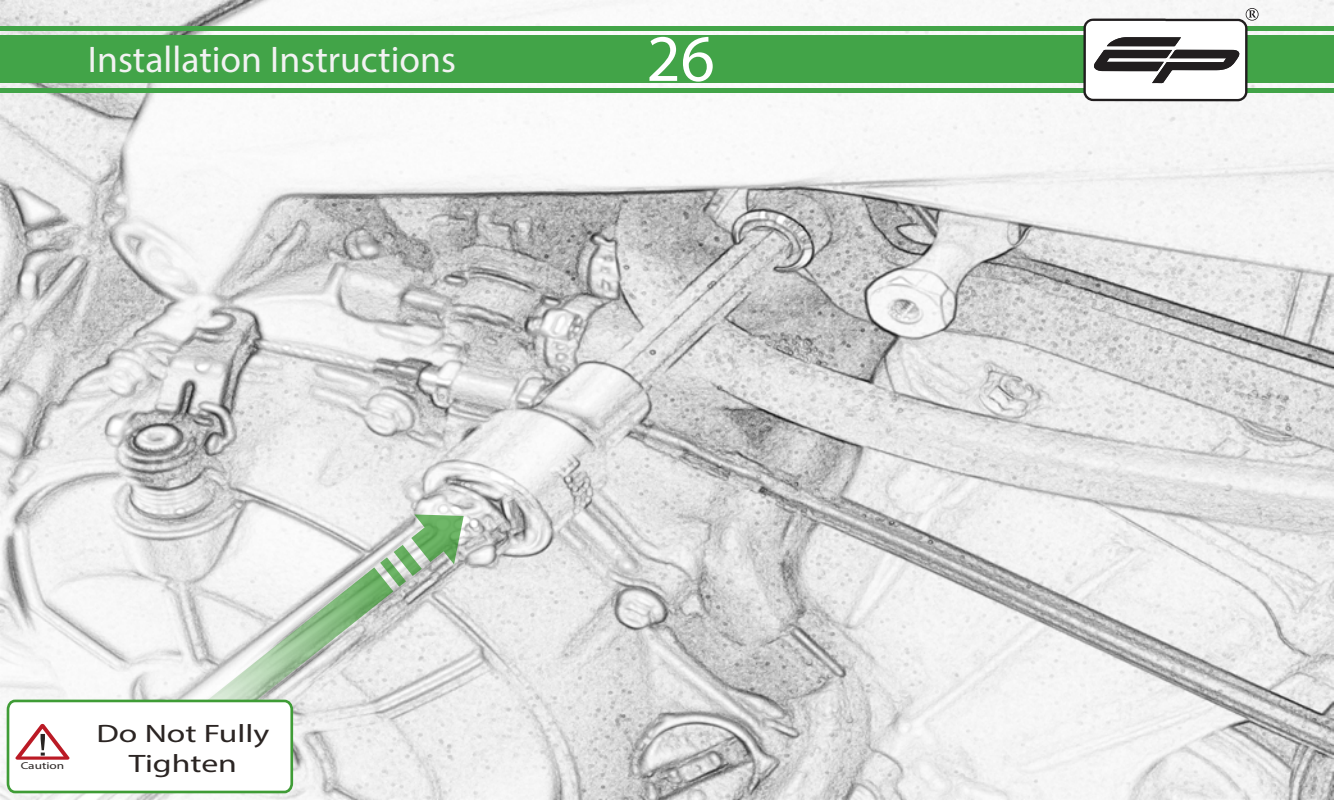


**Do Not Fully  
Tighten**





Fully Tighten  
50Nm



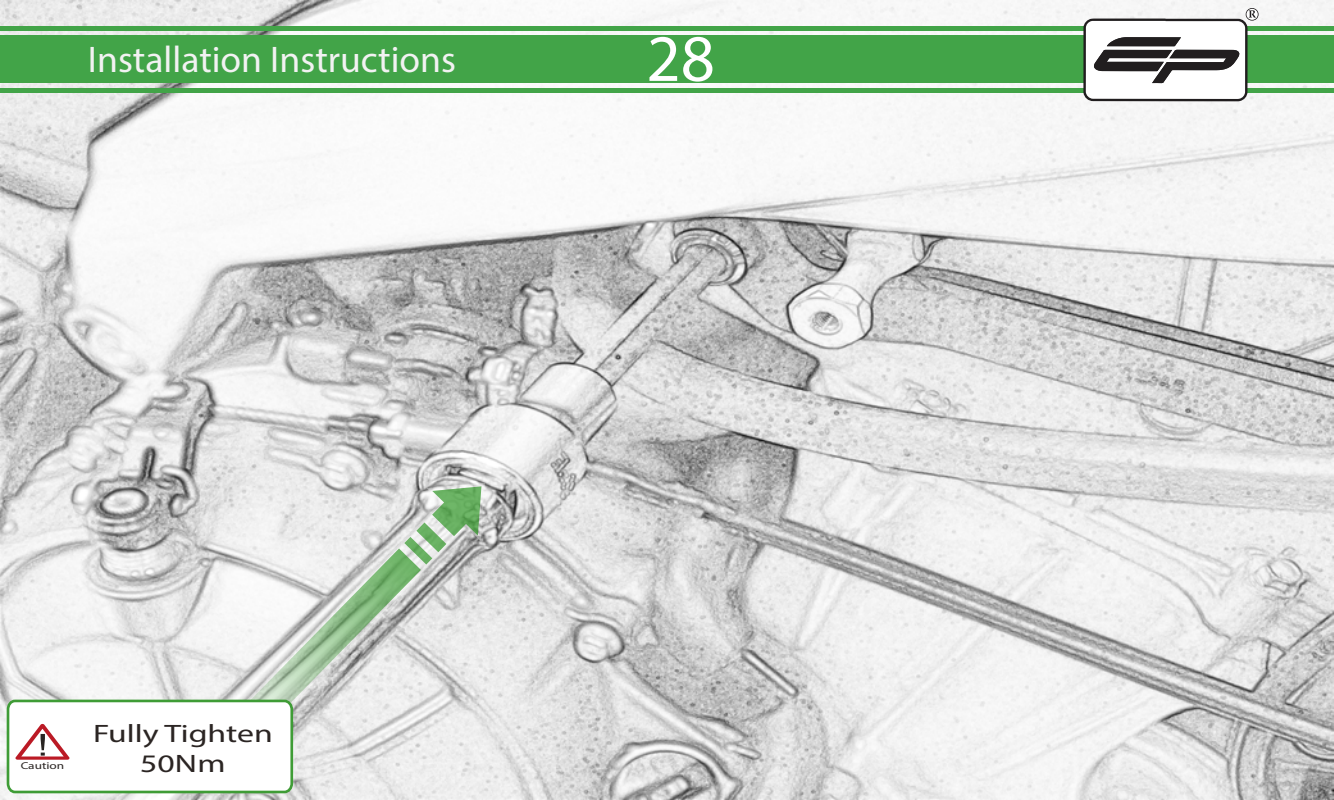


Fully Tighten  
50Nm

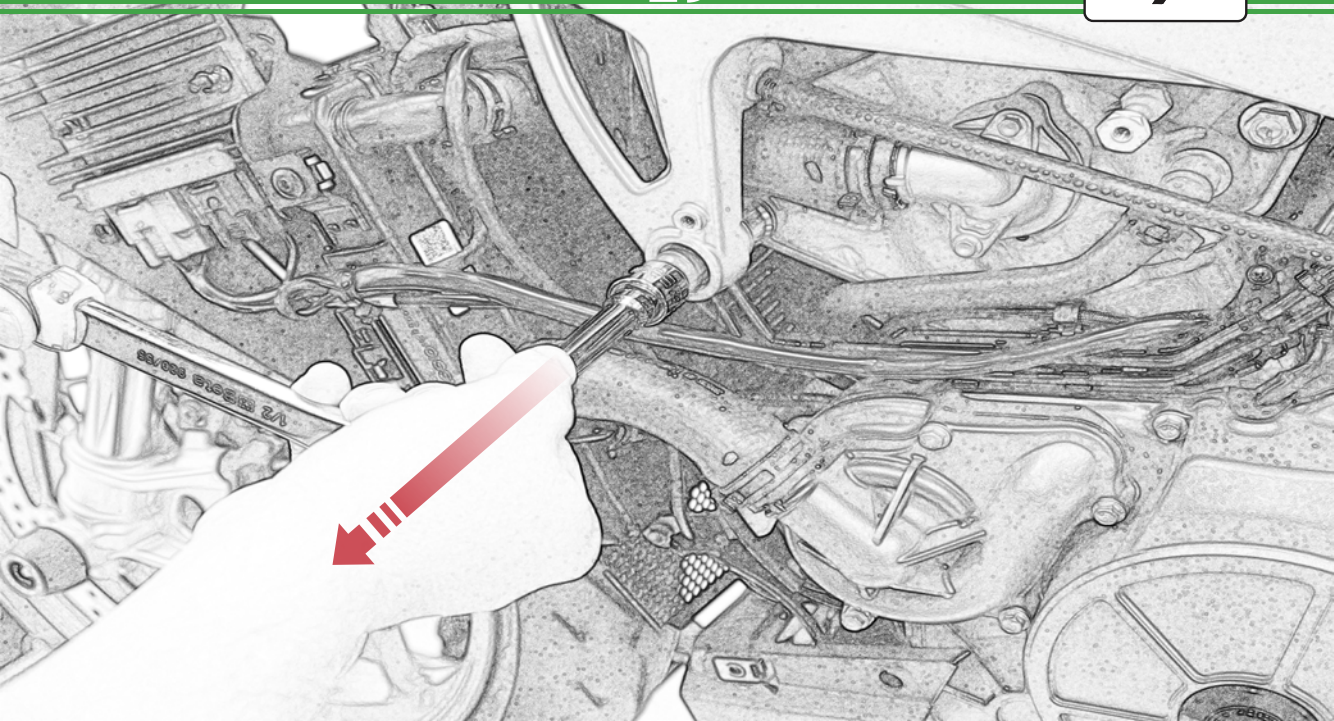


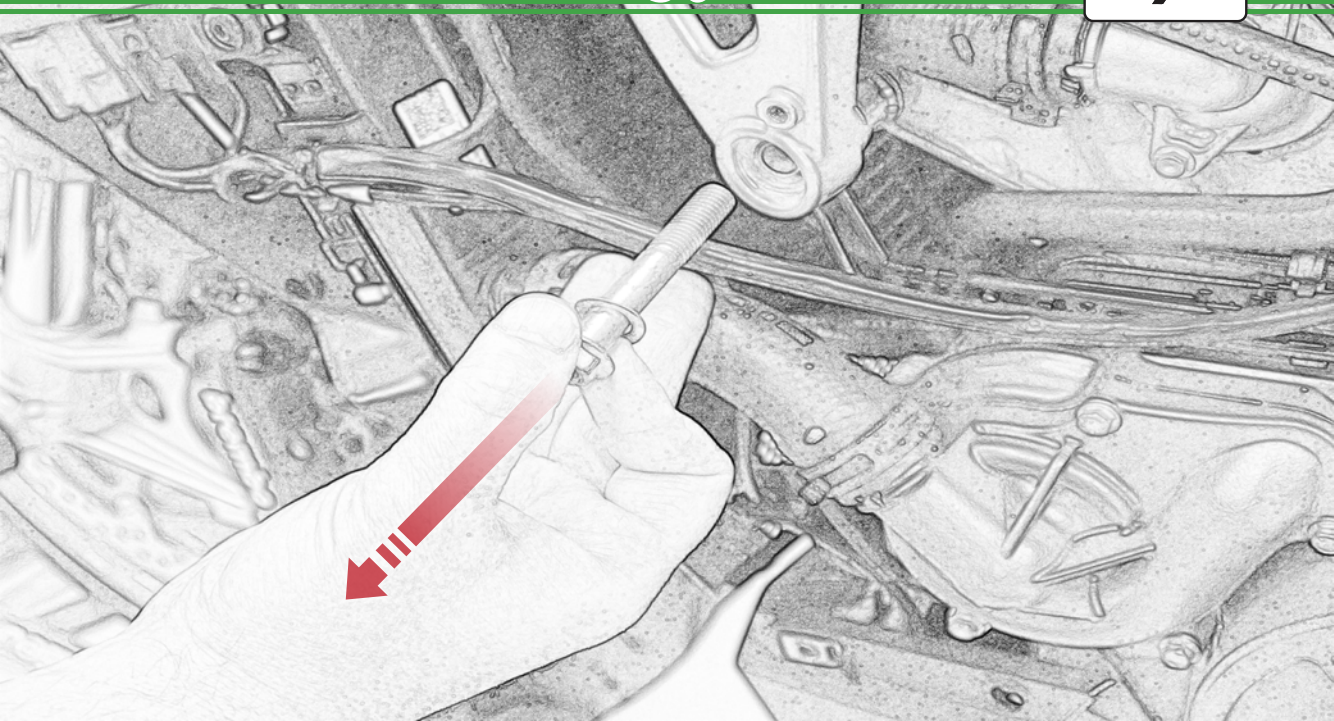




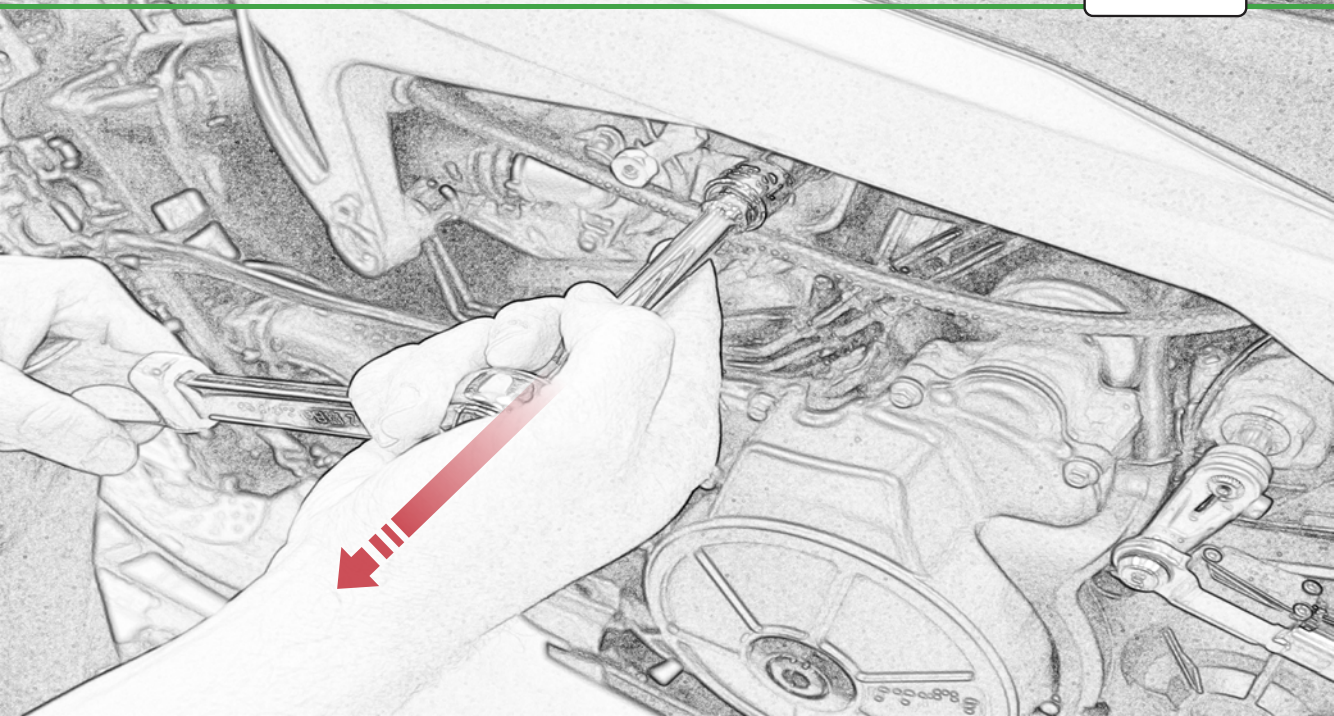




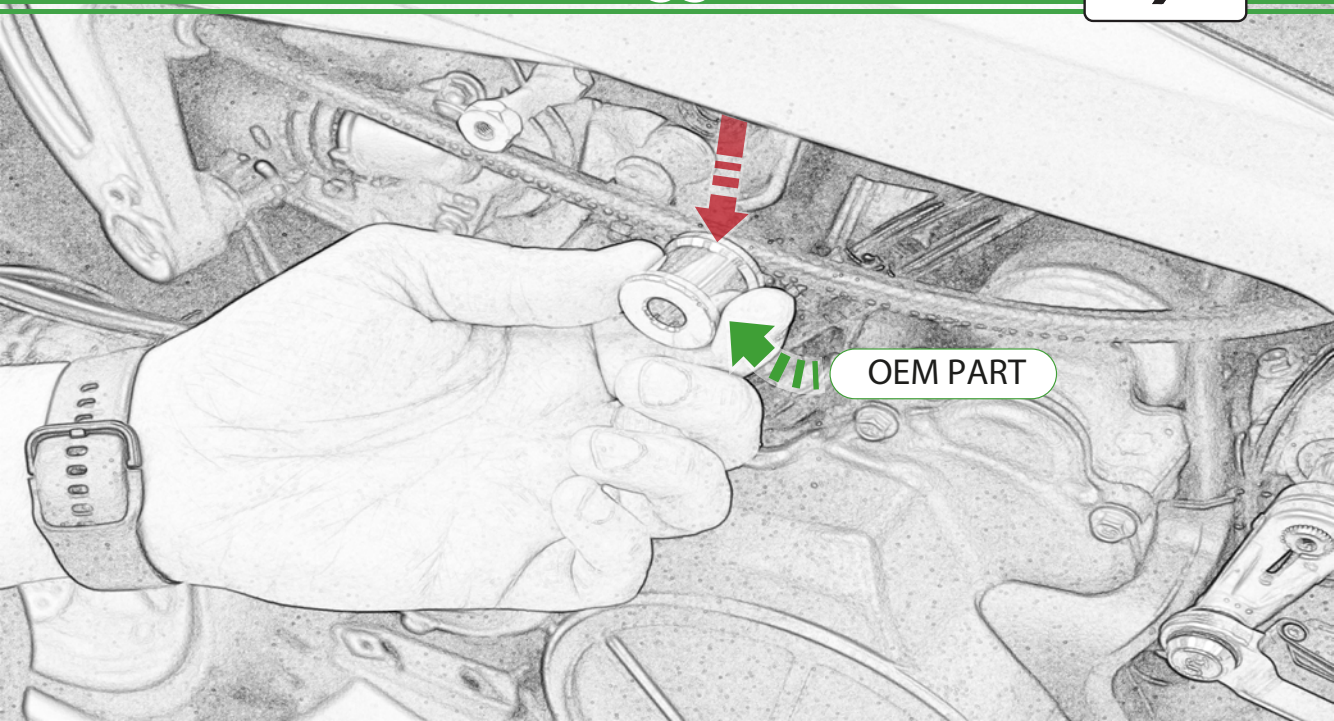


OEM PART

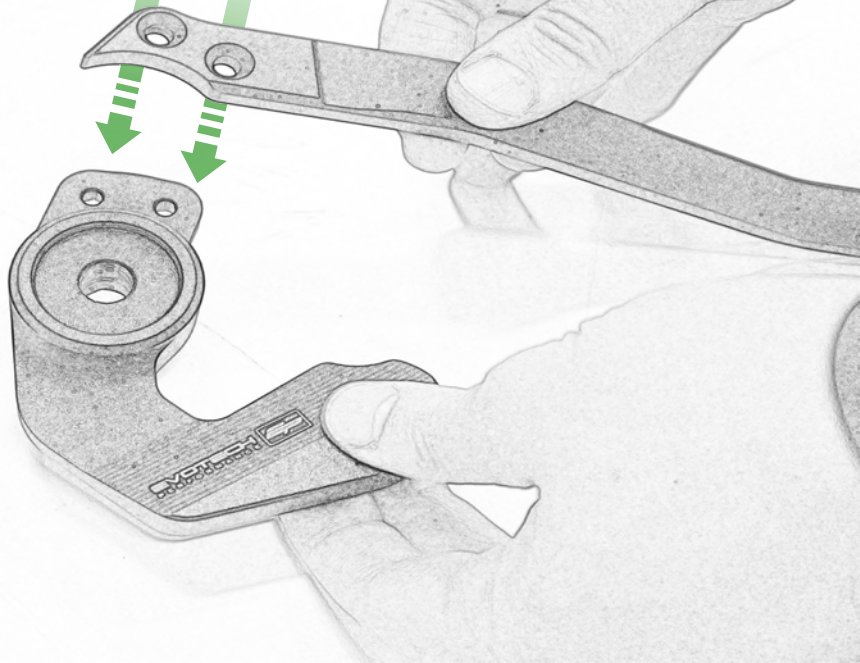




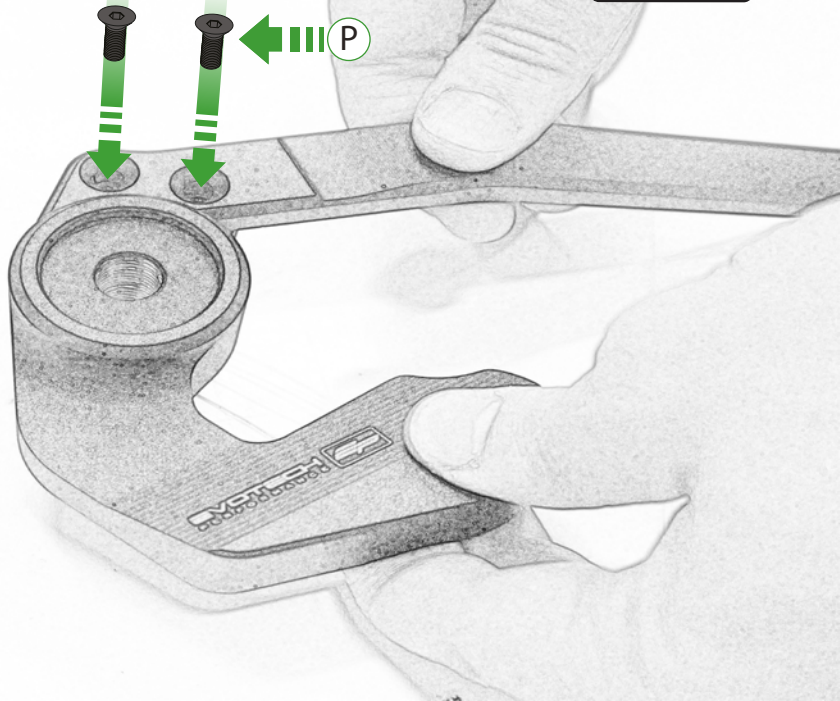



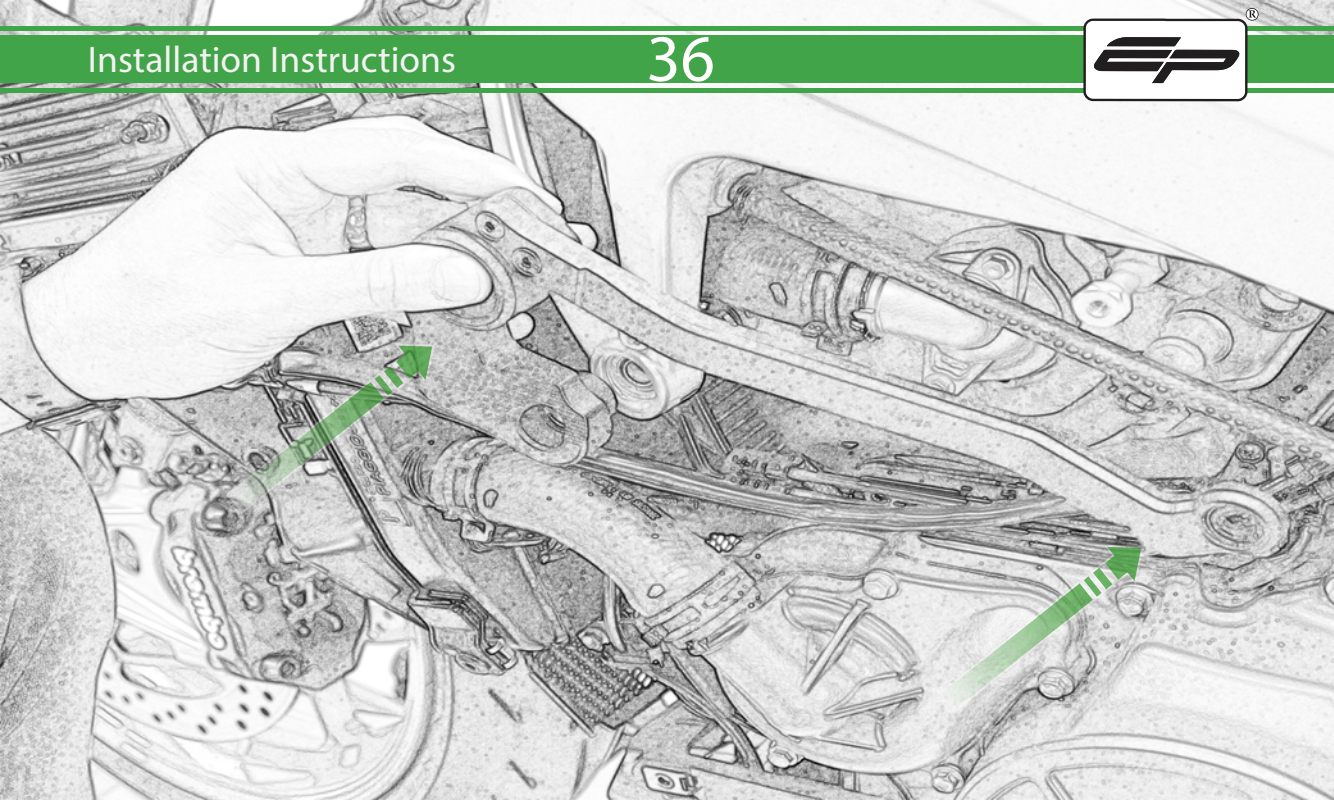



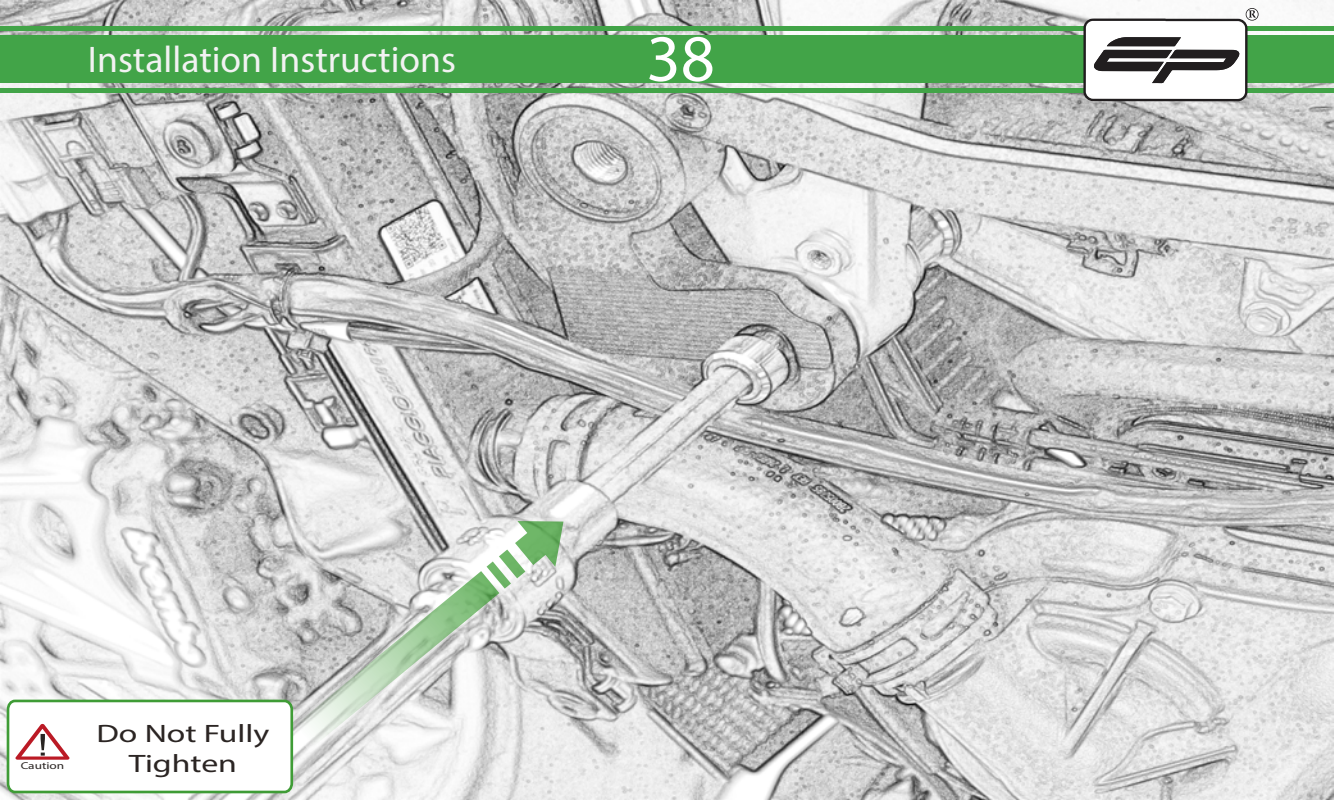



Do Not Fully Tighten







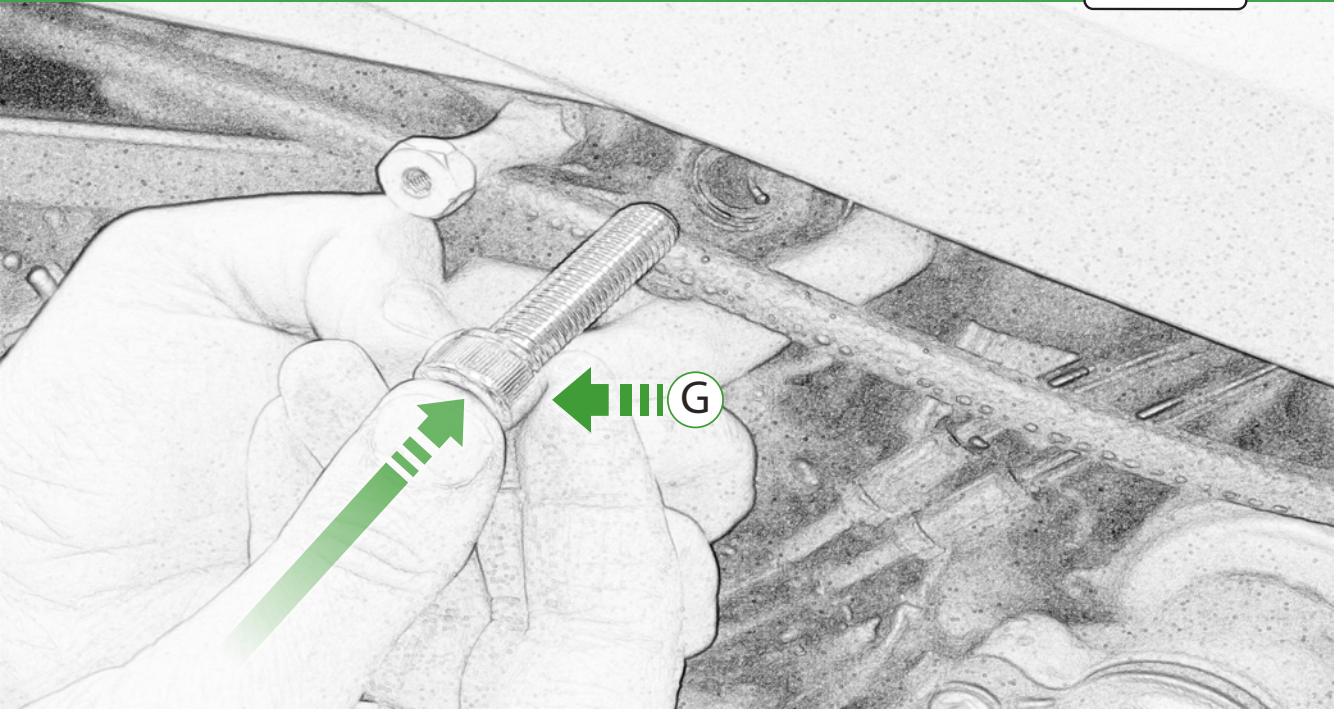


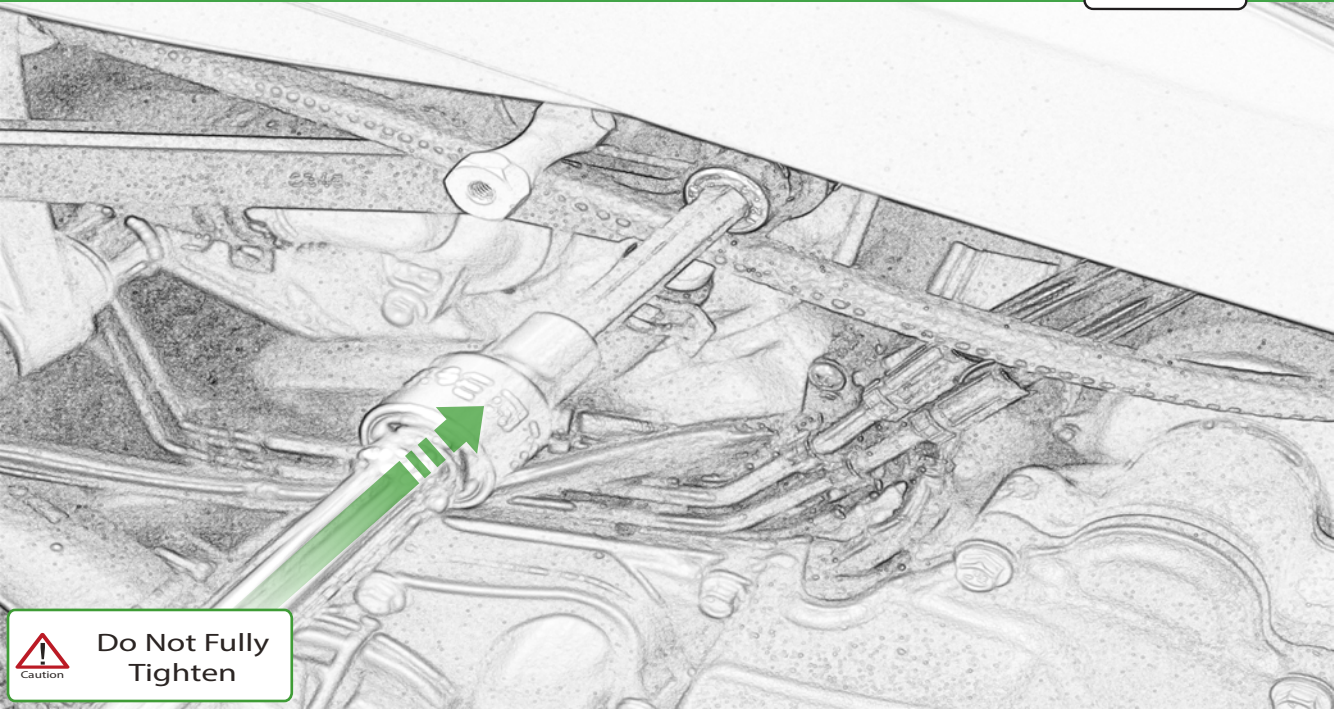

**Do Not Fully  
Tighten**





Fully Tighten  
50Nm

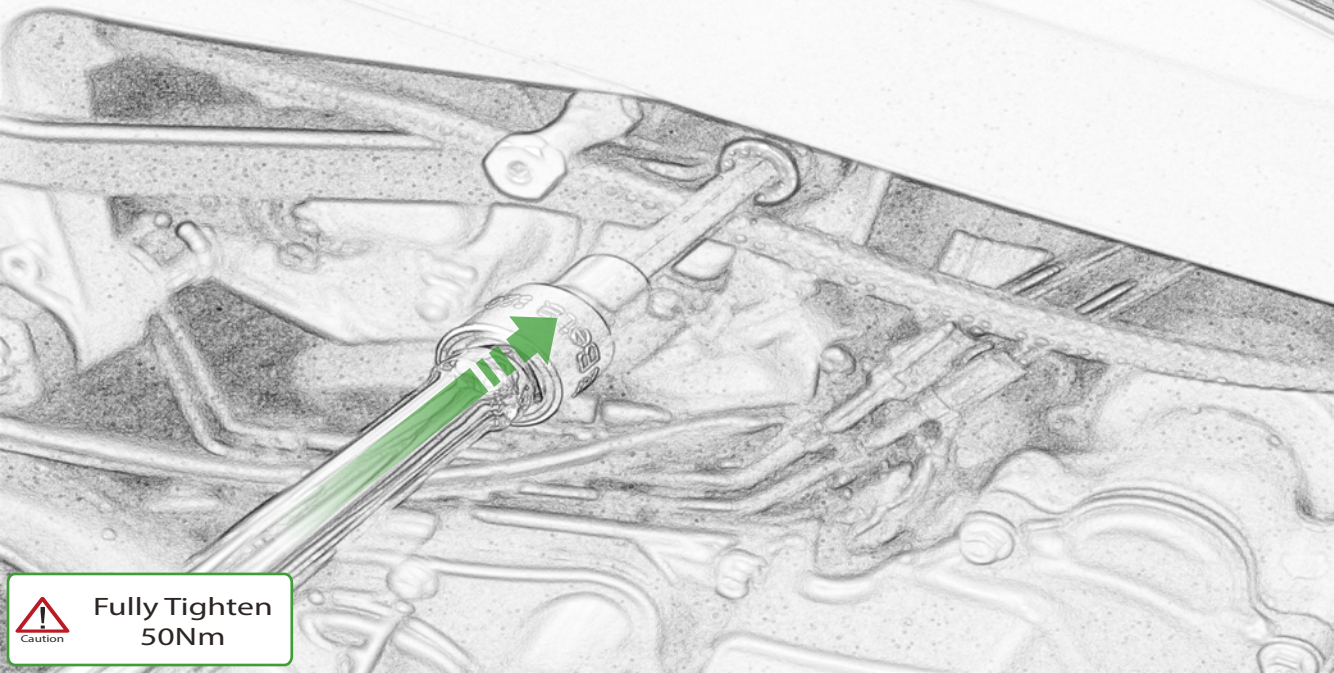



Fully Tighten  
50Nm



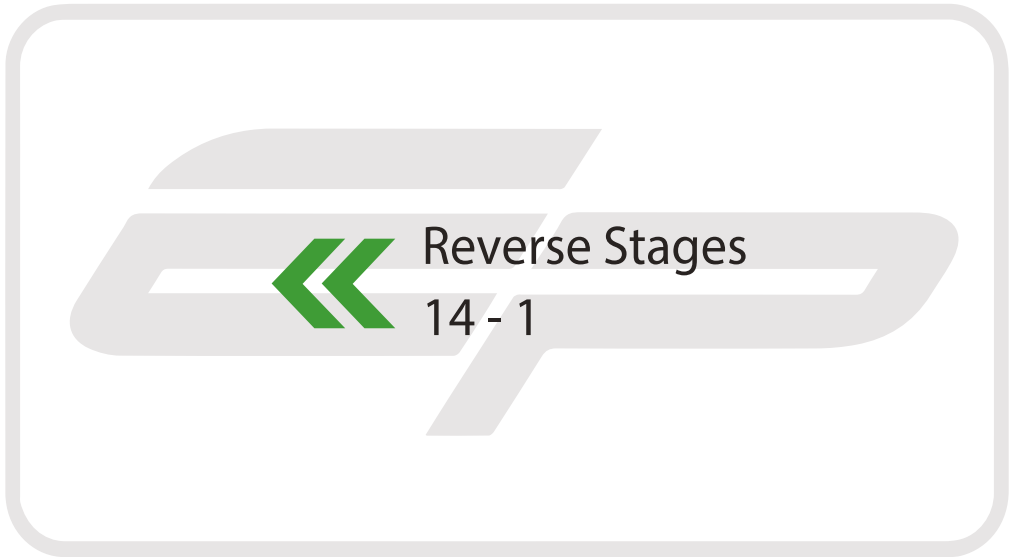


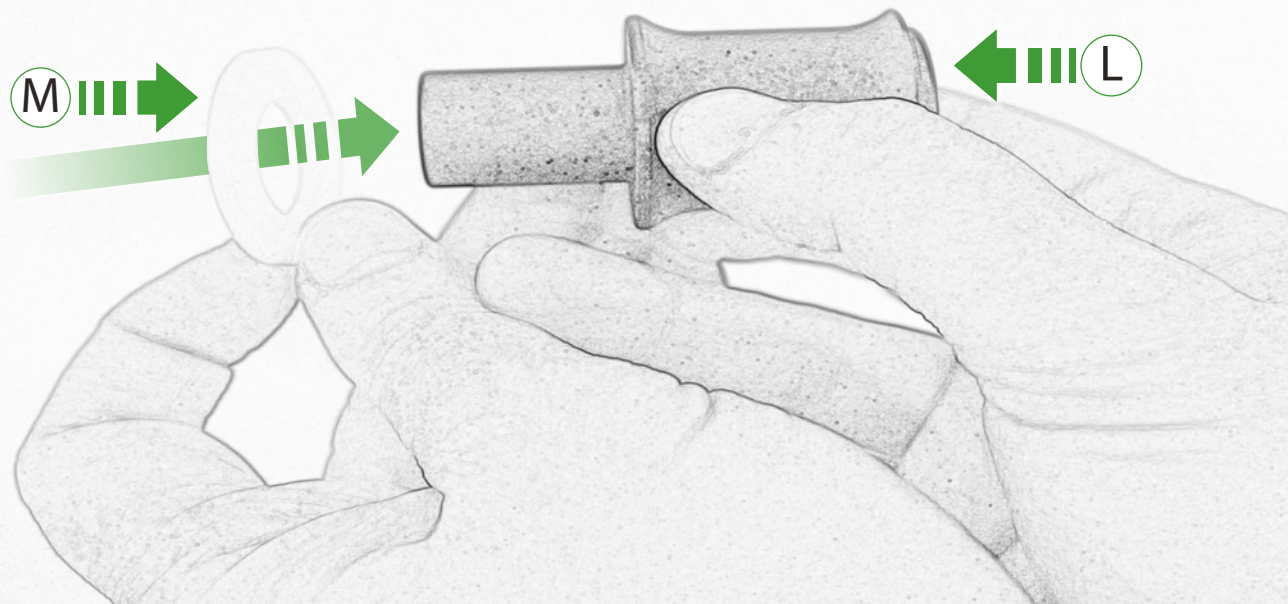


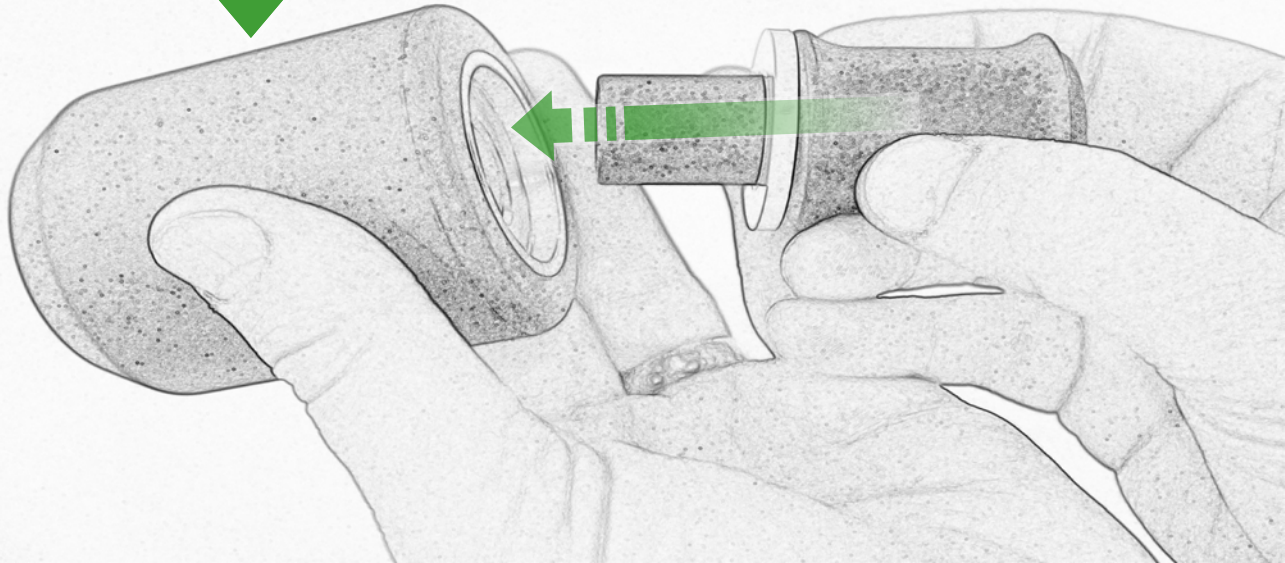

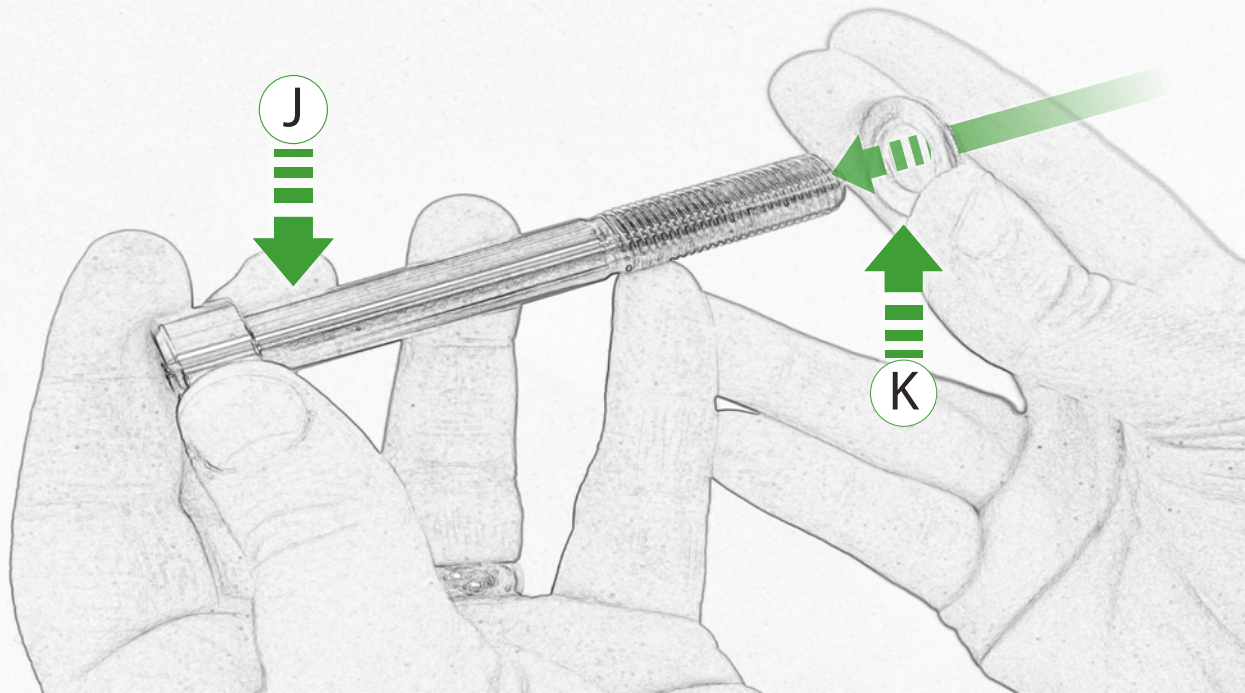



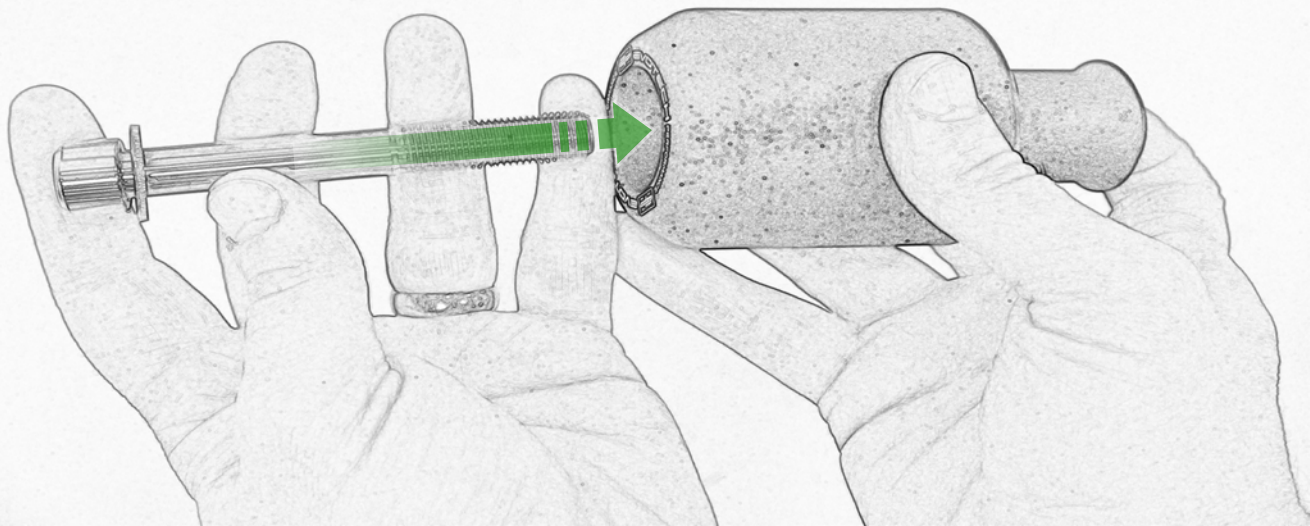

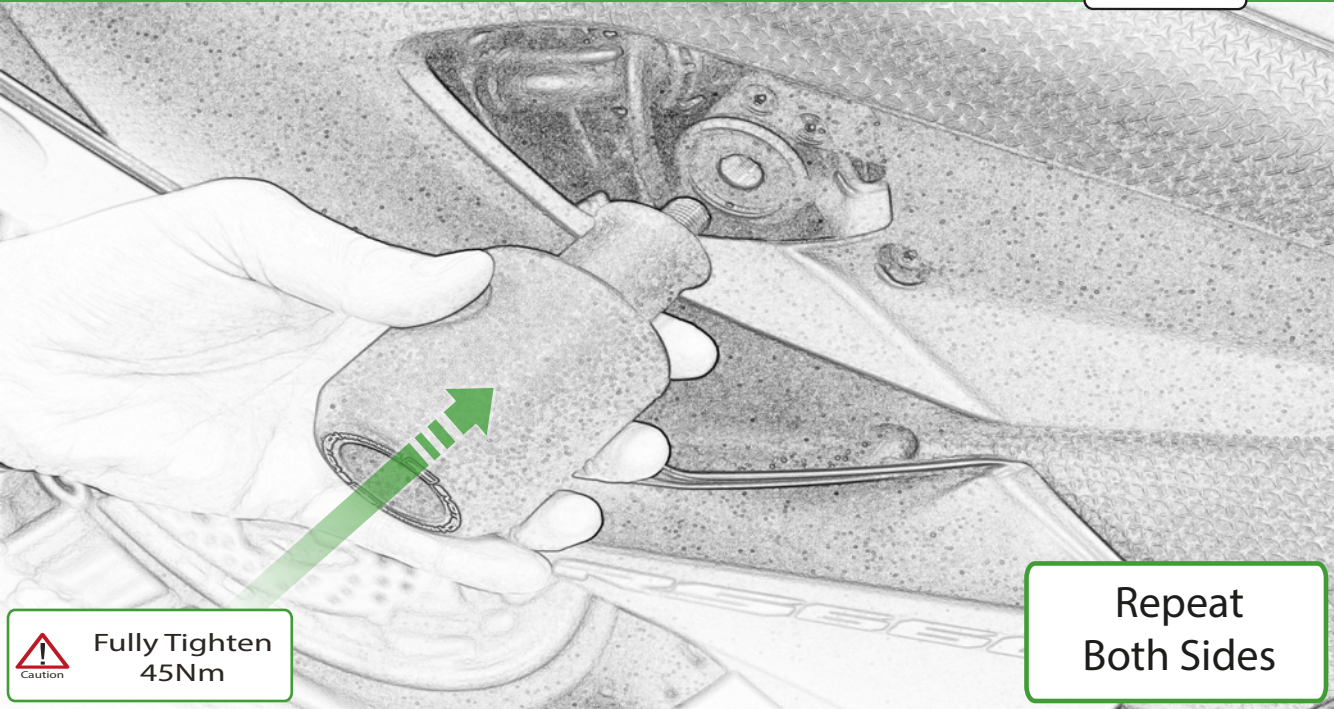

Fully Tighten  
45Nm

Repeat  
Both Sides



## ESSENTIAL CHECKS



It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)