

**EVOTECH**®  
P E R F O R M A N C E


[www.evotech-performance.com](http://www.evotech-performance.com)


BMW S 1000 XR / TE Crash Protection  
& Light Bracket Kit




## Kit Contents PRN015134

- Ⓐ 1 x R/H Bobbin Bracket
- Ⓑ 1 x L/H Bobbin Bracket
- Ⓒ 1 x R/H Light Bracket
- Ⓓ 1 x L/H Light Bracket
- Ⓔ 1 x M10 x 80 Caphead
- Ⓕ 2 x M12 Washer
- Ⓖ 2 x Poly Washer
- Ⓗ 2 x Bobbin Spacer
- Ⓘ 2 x Large Bobbin Head
- Ⓙ 2 x Bracket Spacer
- Ⓚ 2 x M5 washers
- Ⓛ 2 x M5 x 12 Button Head Bolts
- Ⓜ 2 x M10 x 35 Caphead
- Ⓝ 2 x M12 x 70 Caphead

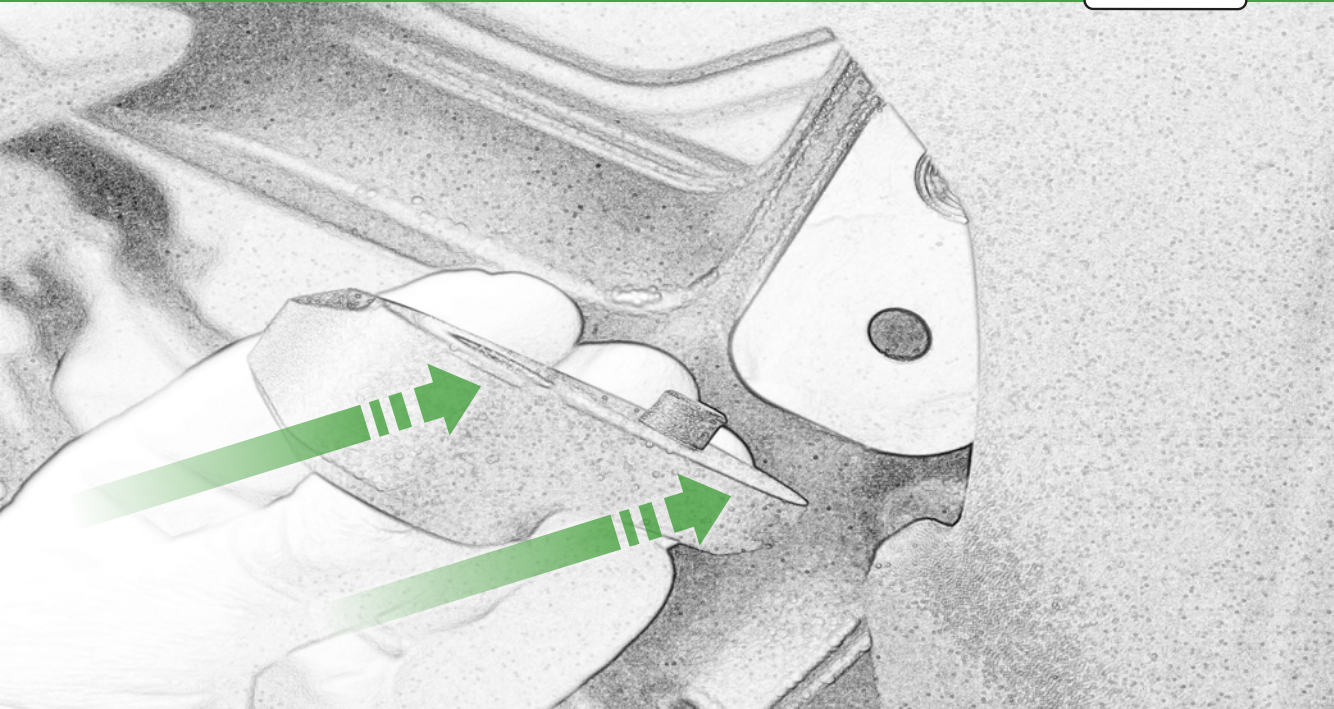

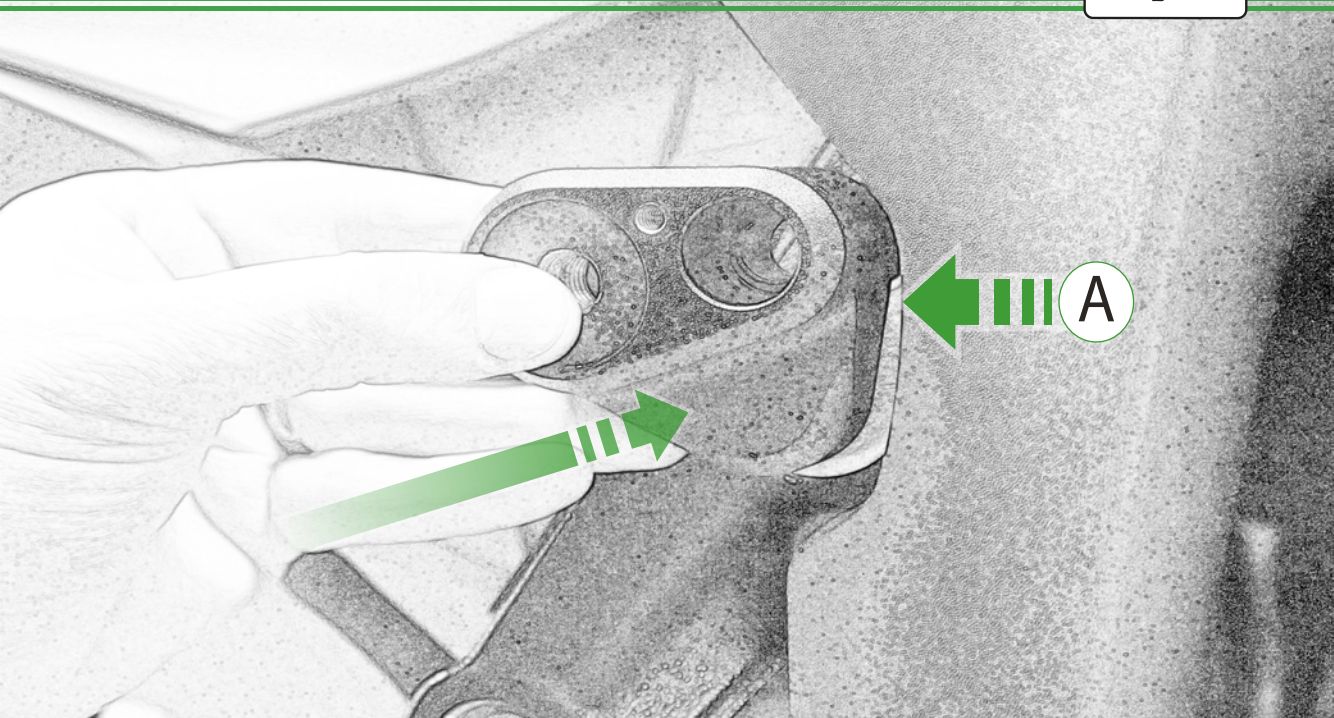





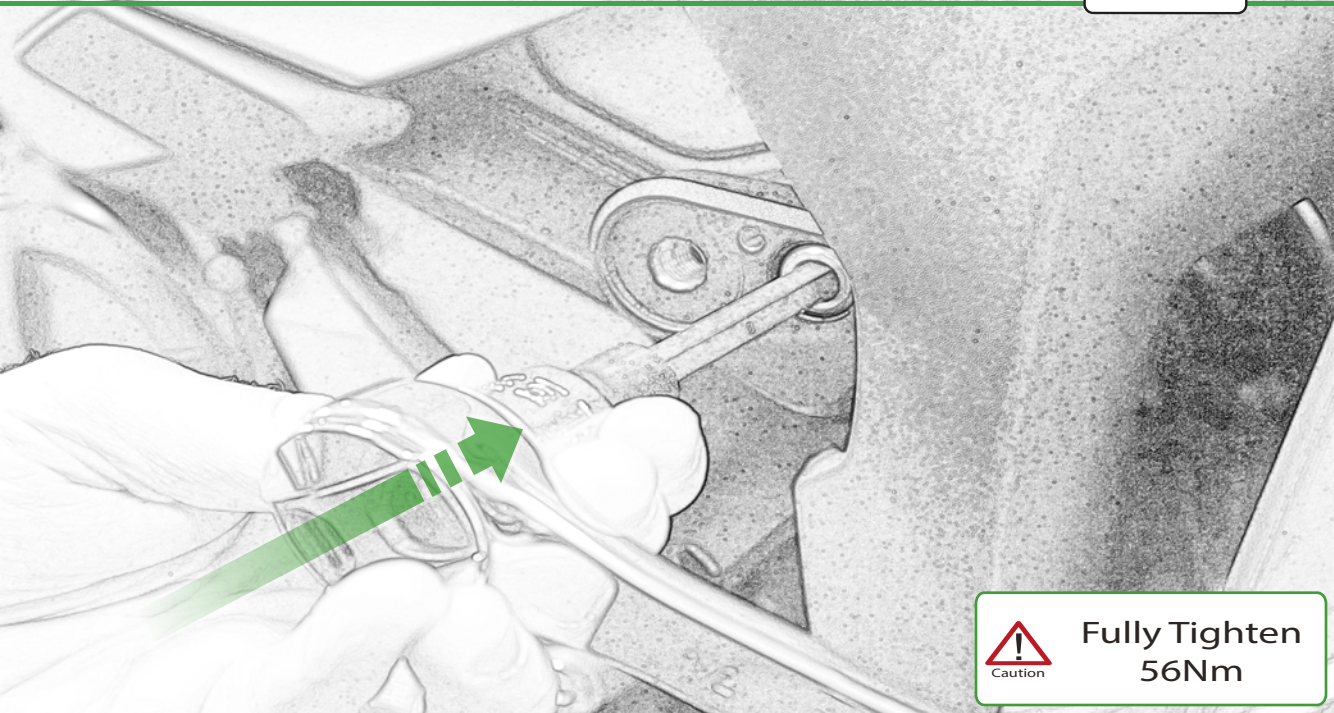


Caution

Fully Tighten  
56Nm

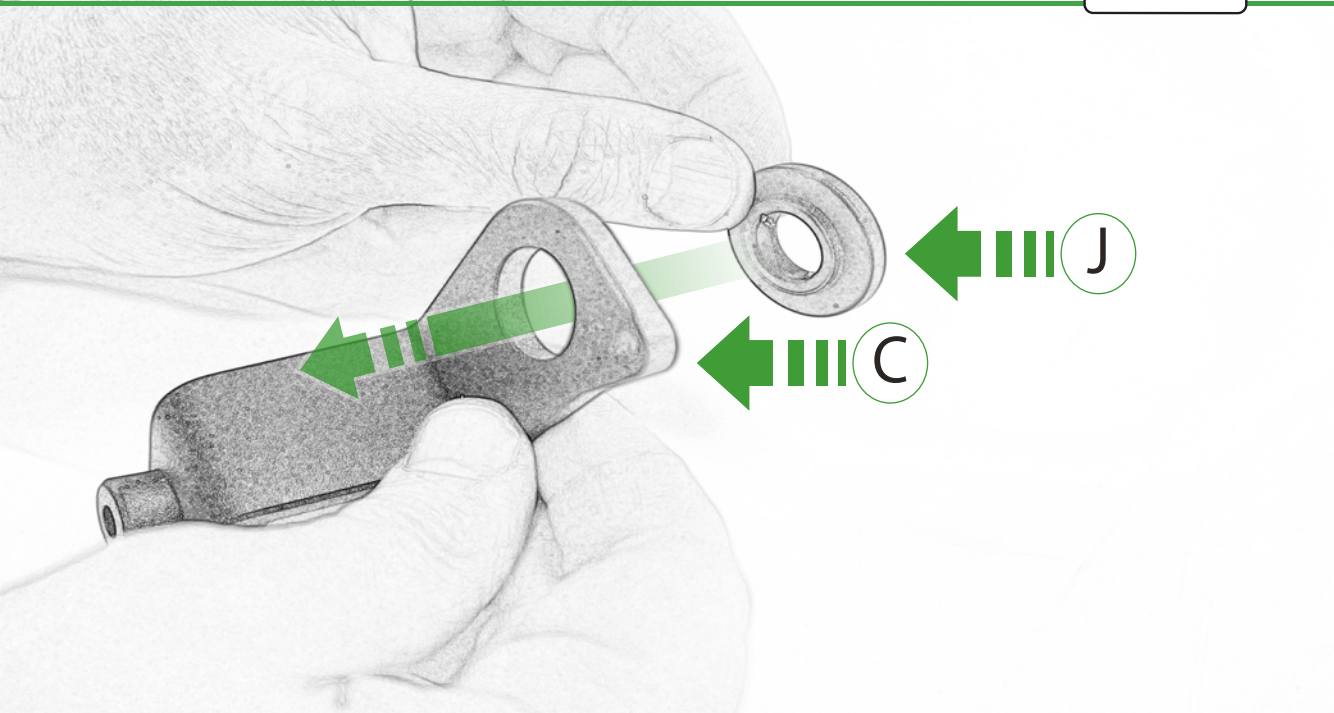

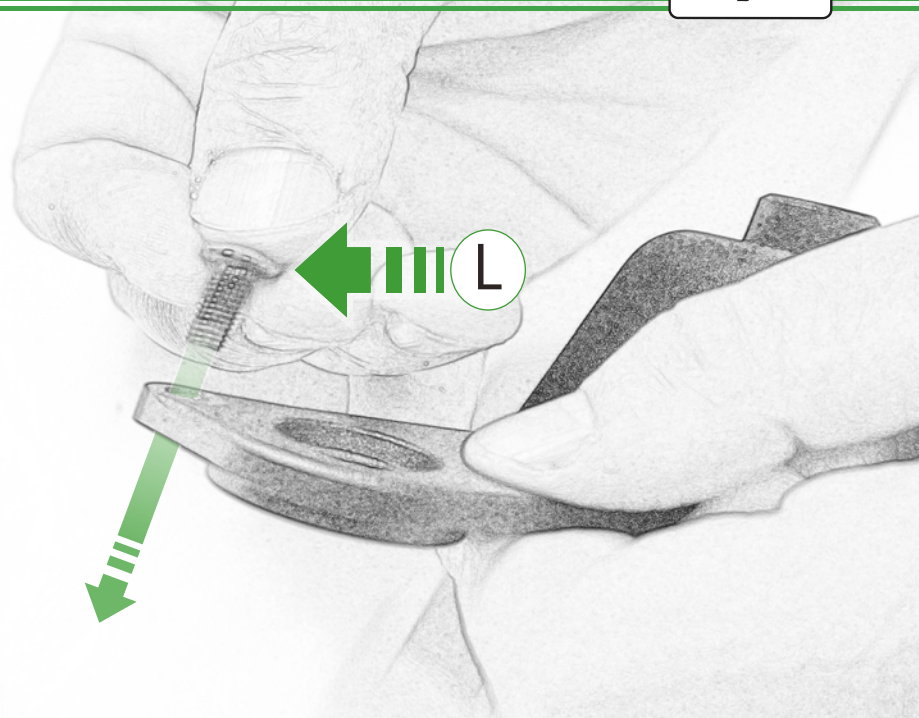




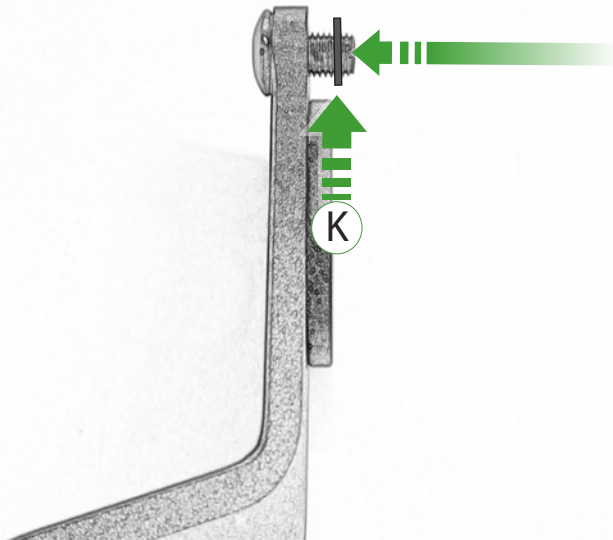








Fully  
Tighten

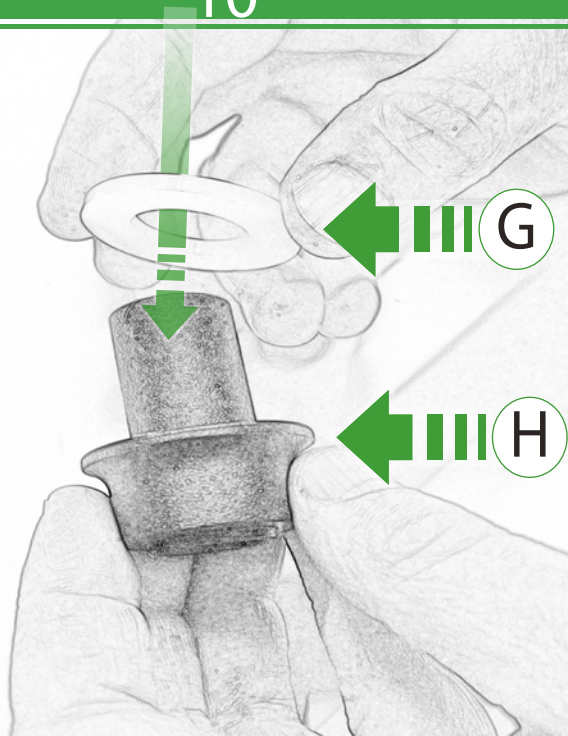

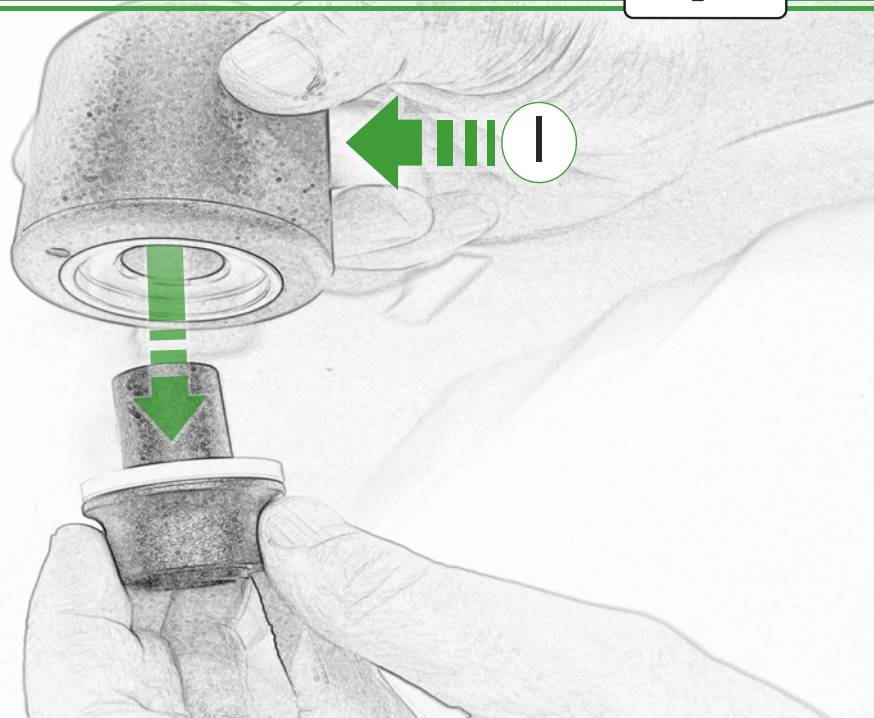




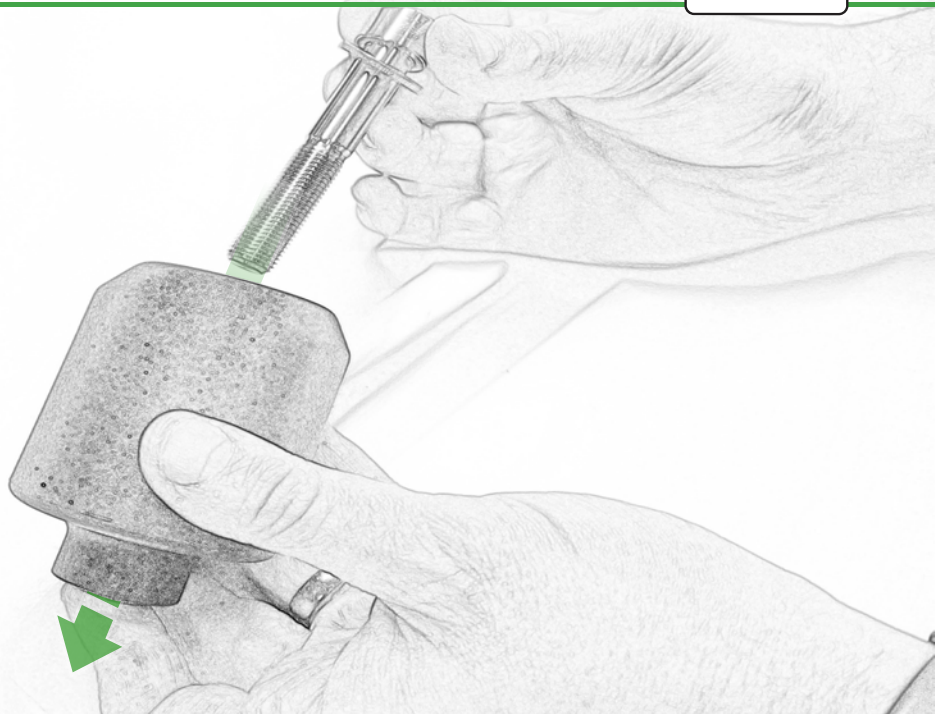

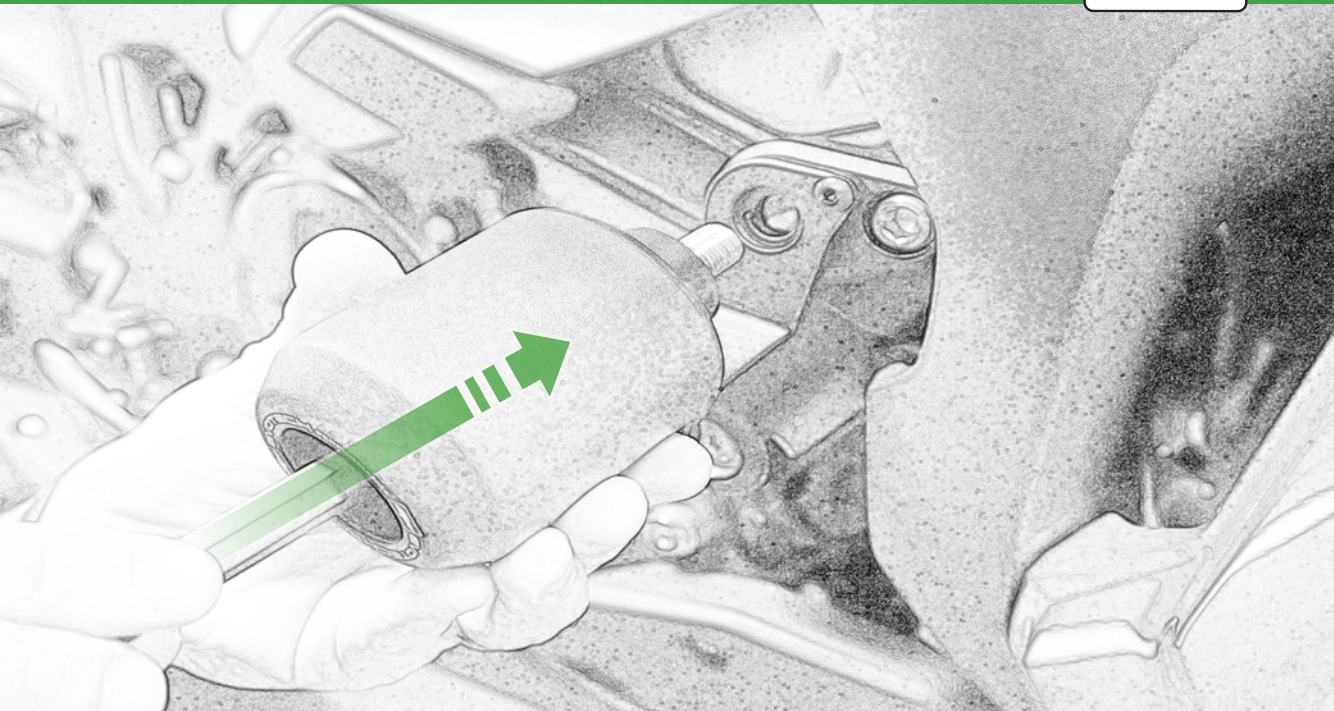





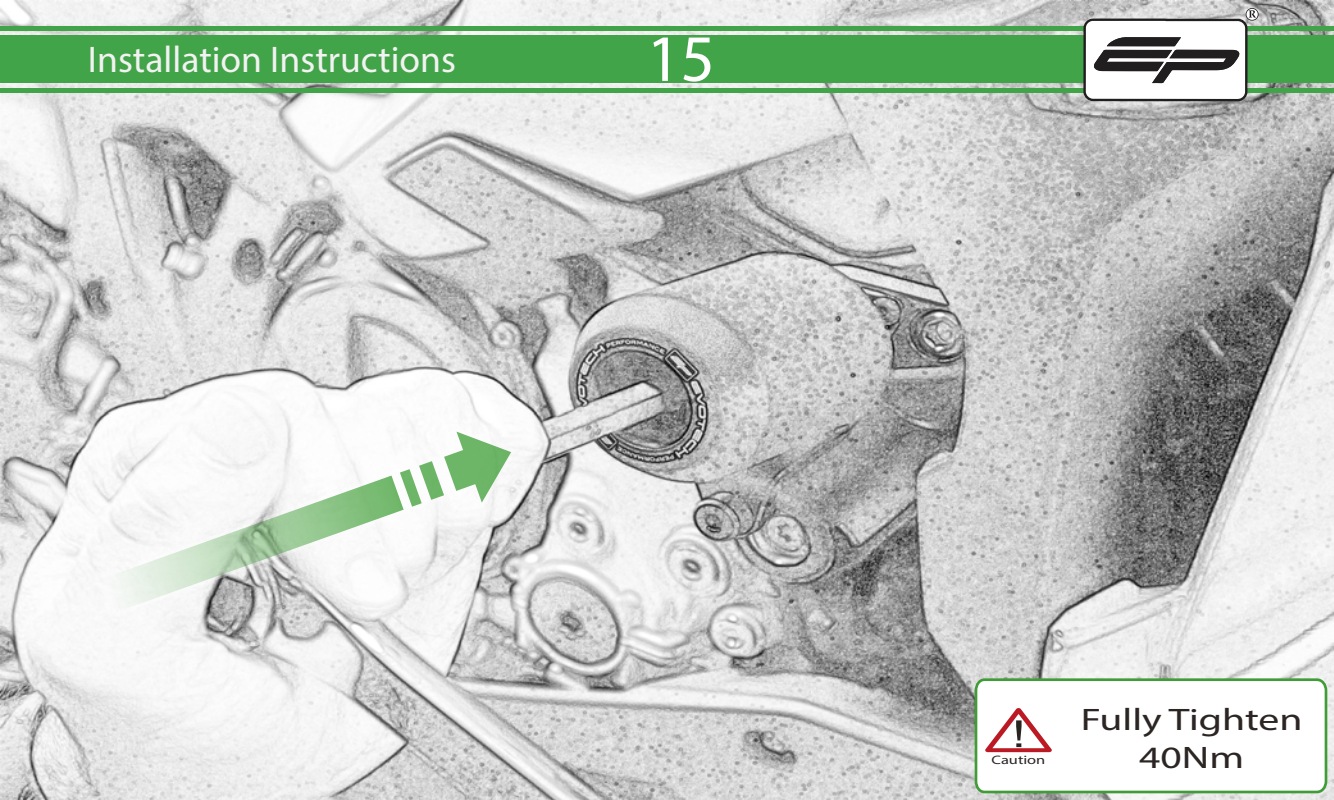


Fully Tighten  
40Nm




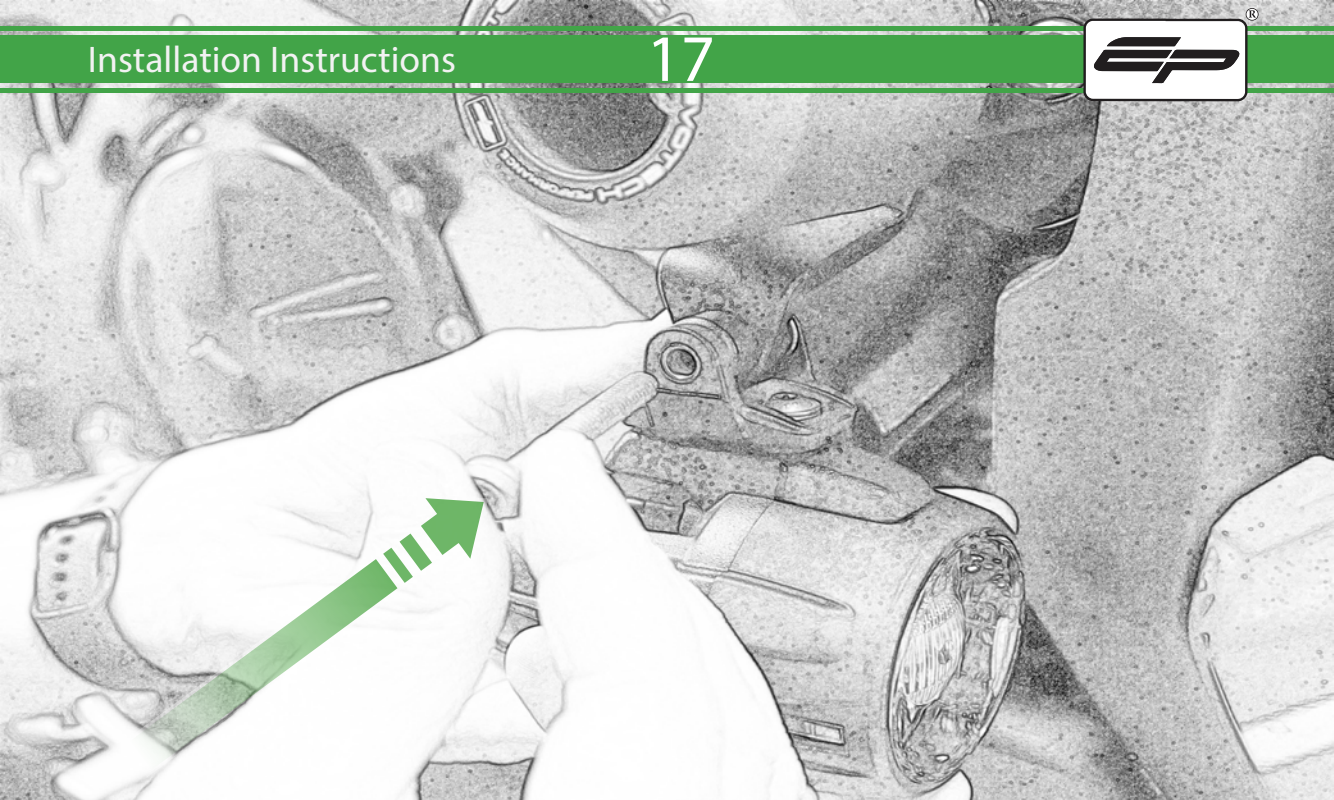

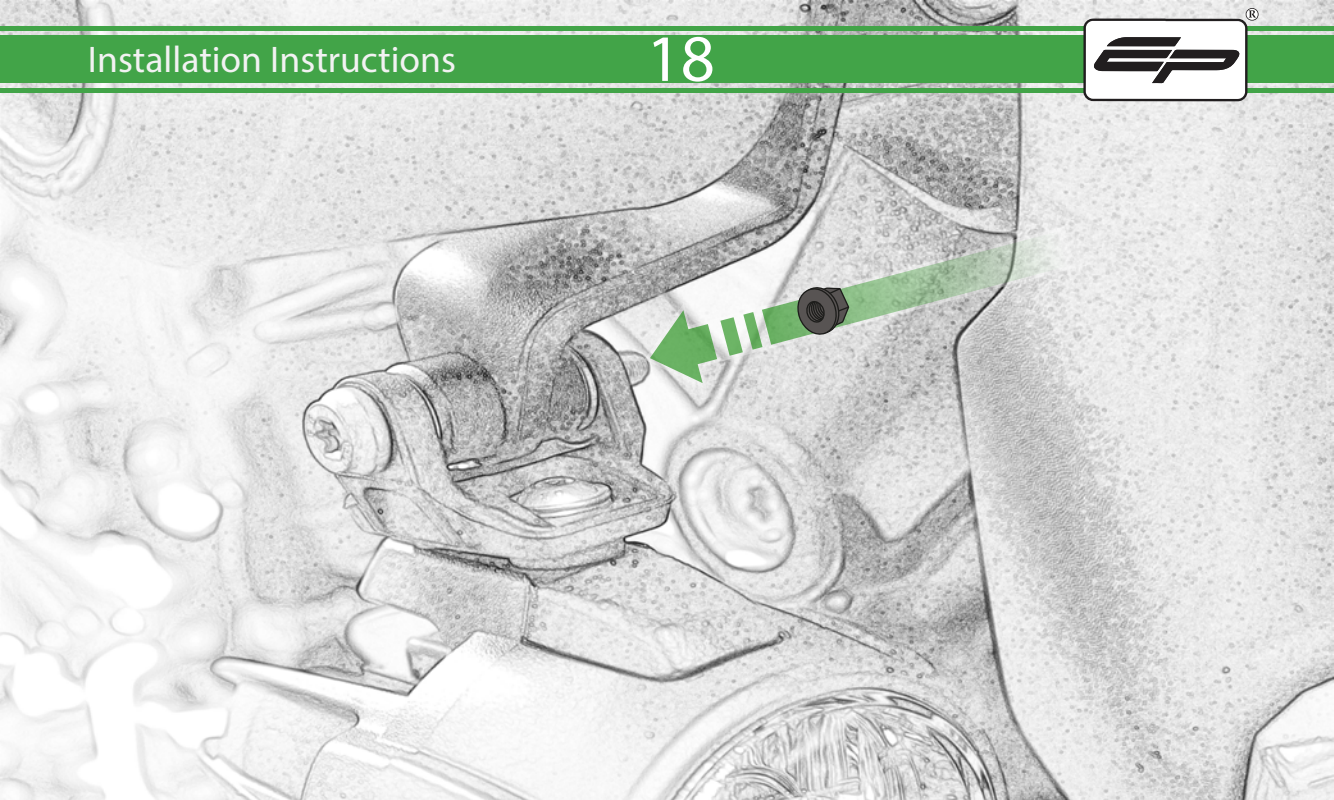

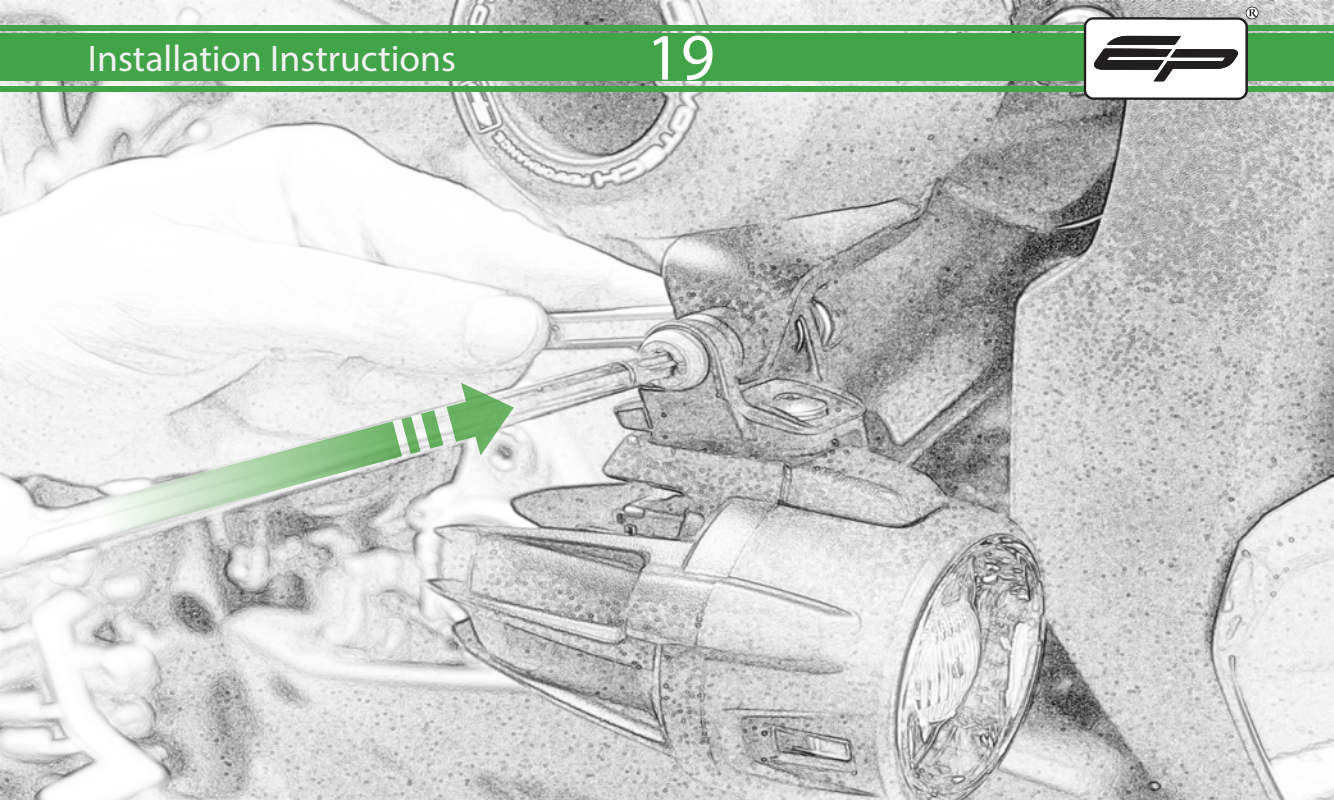




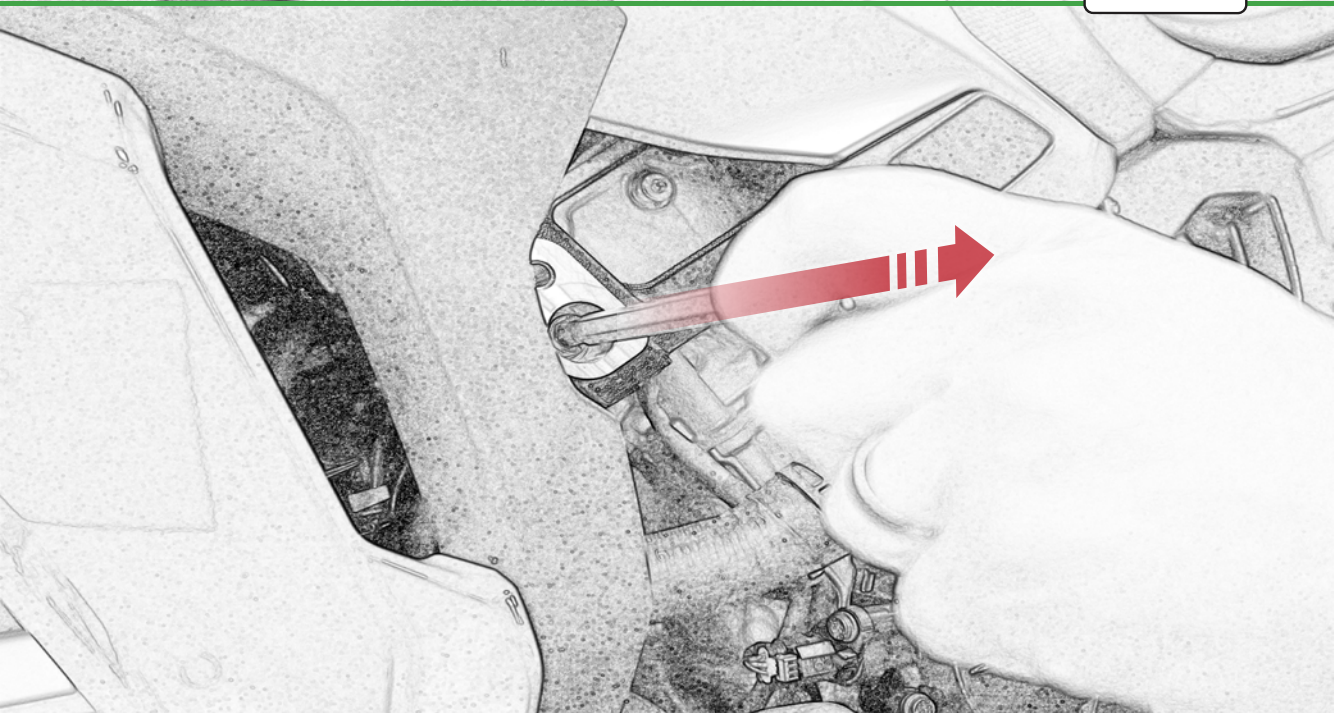






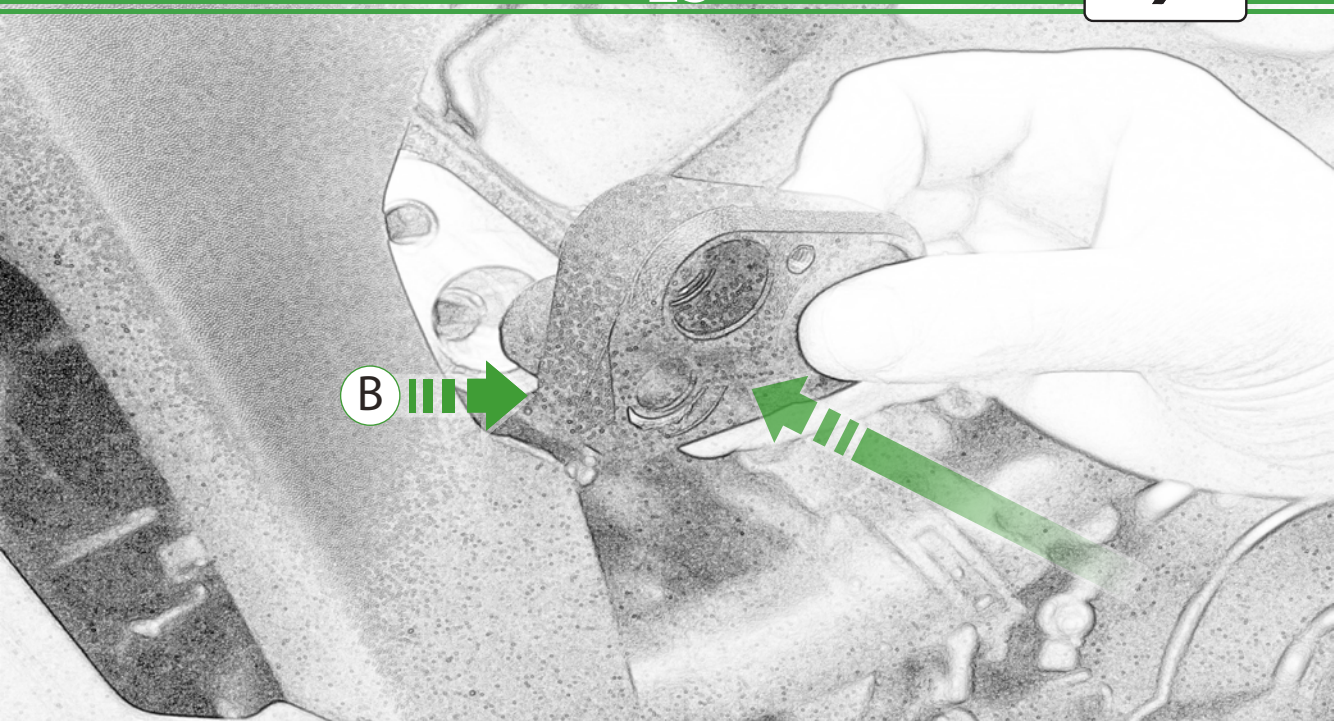

B



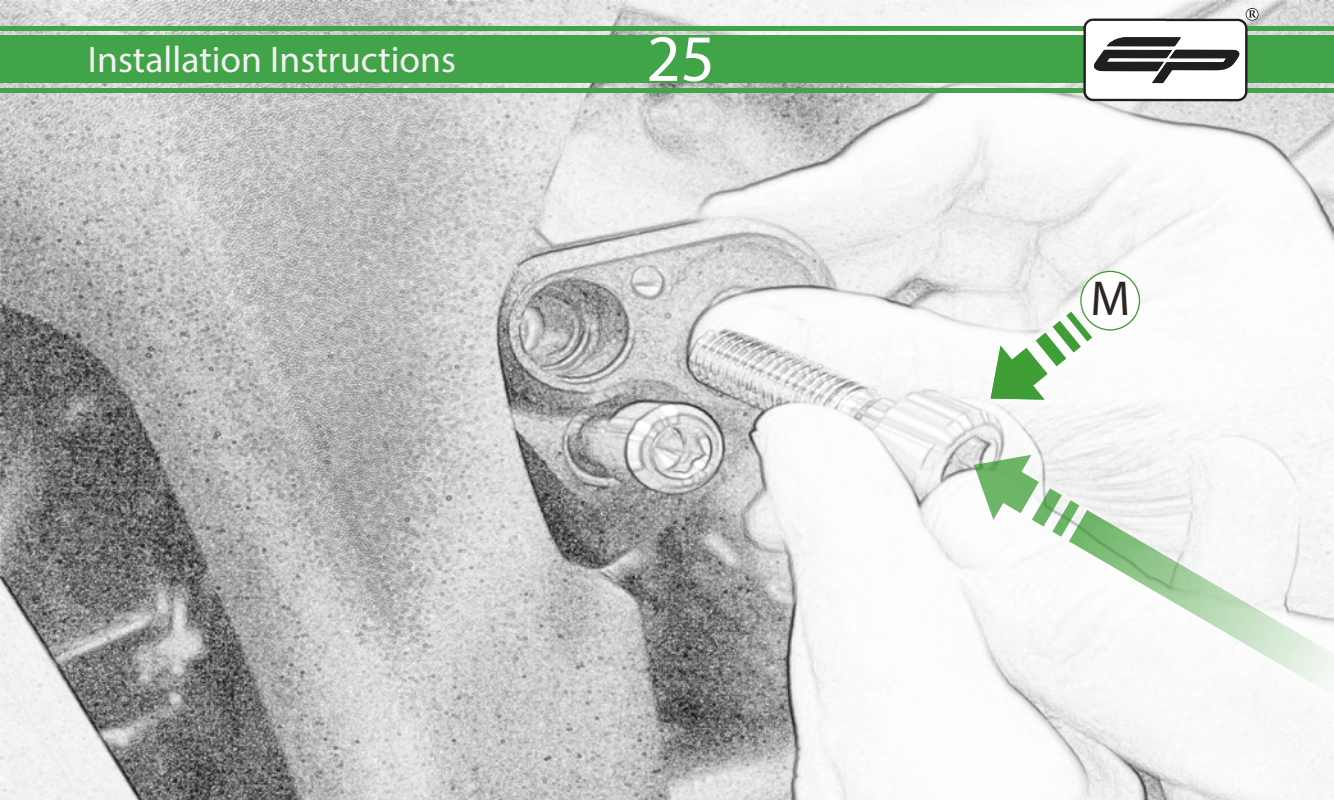






Fully Tighten  
56Nm



Fully Tighten  
56Nm

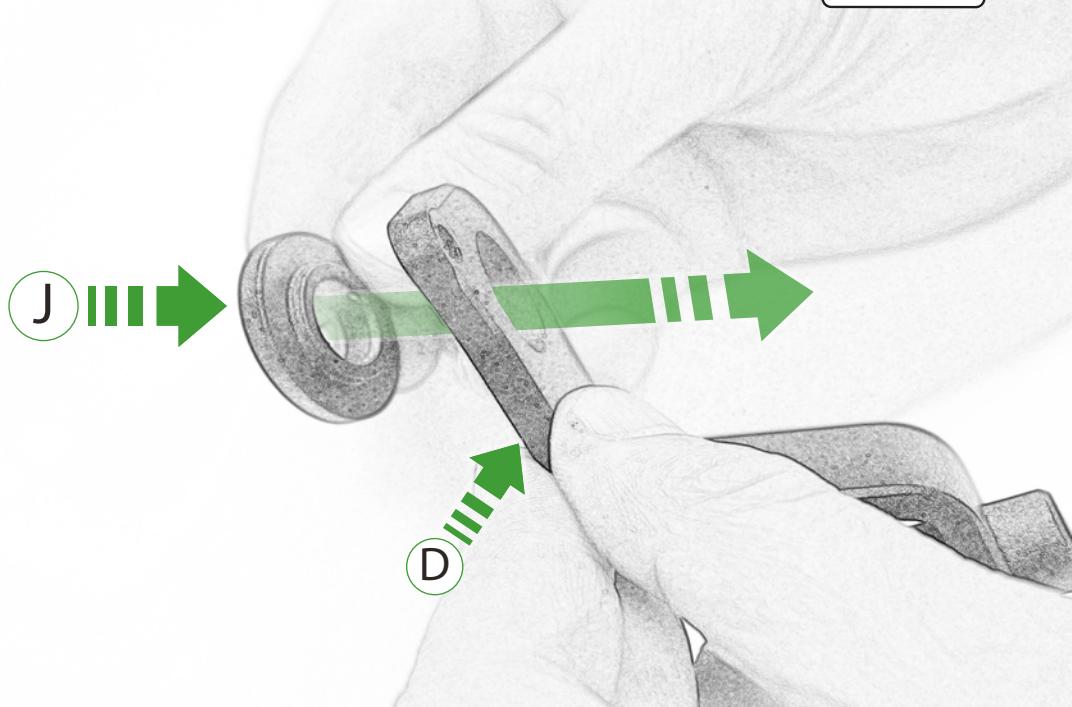


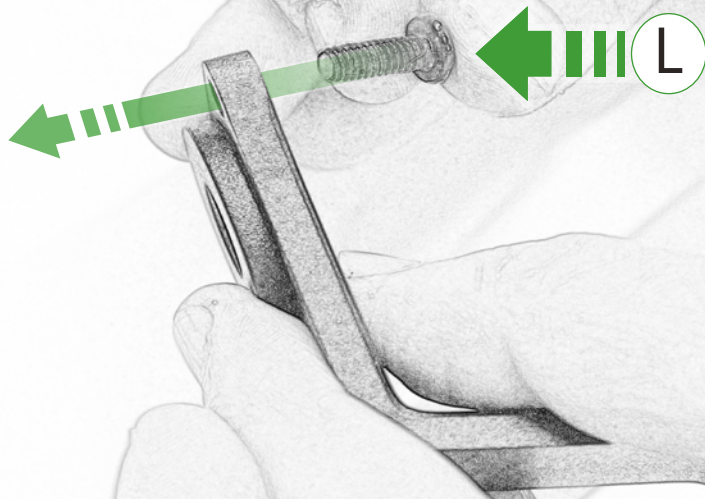


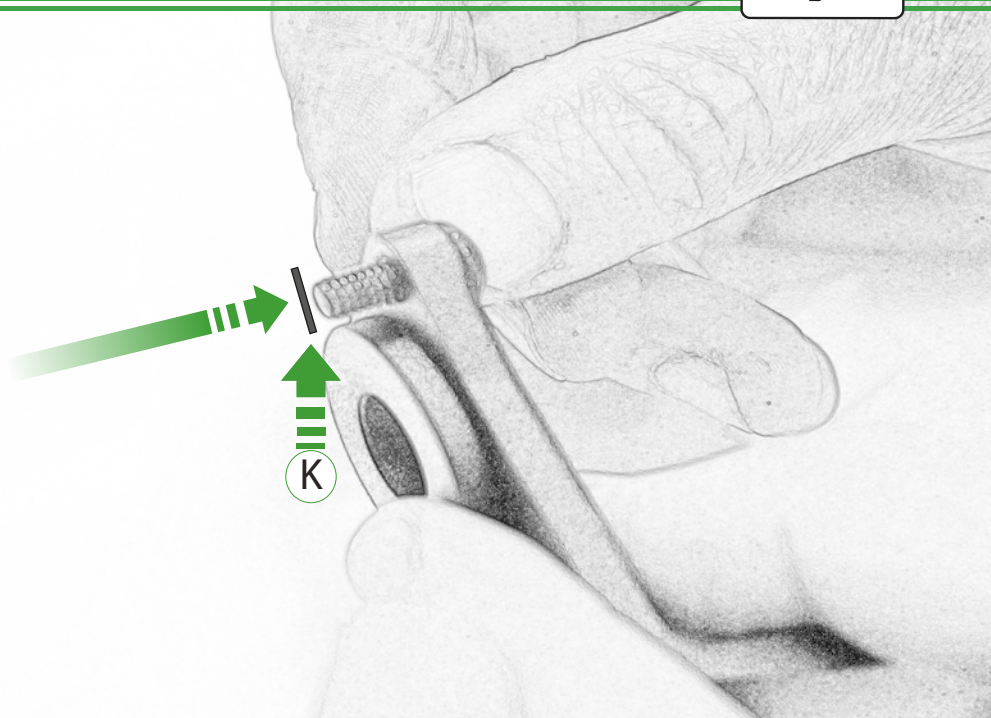







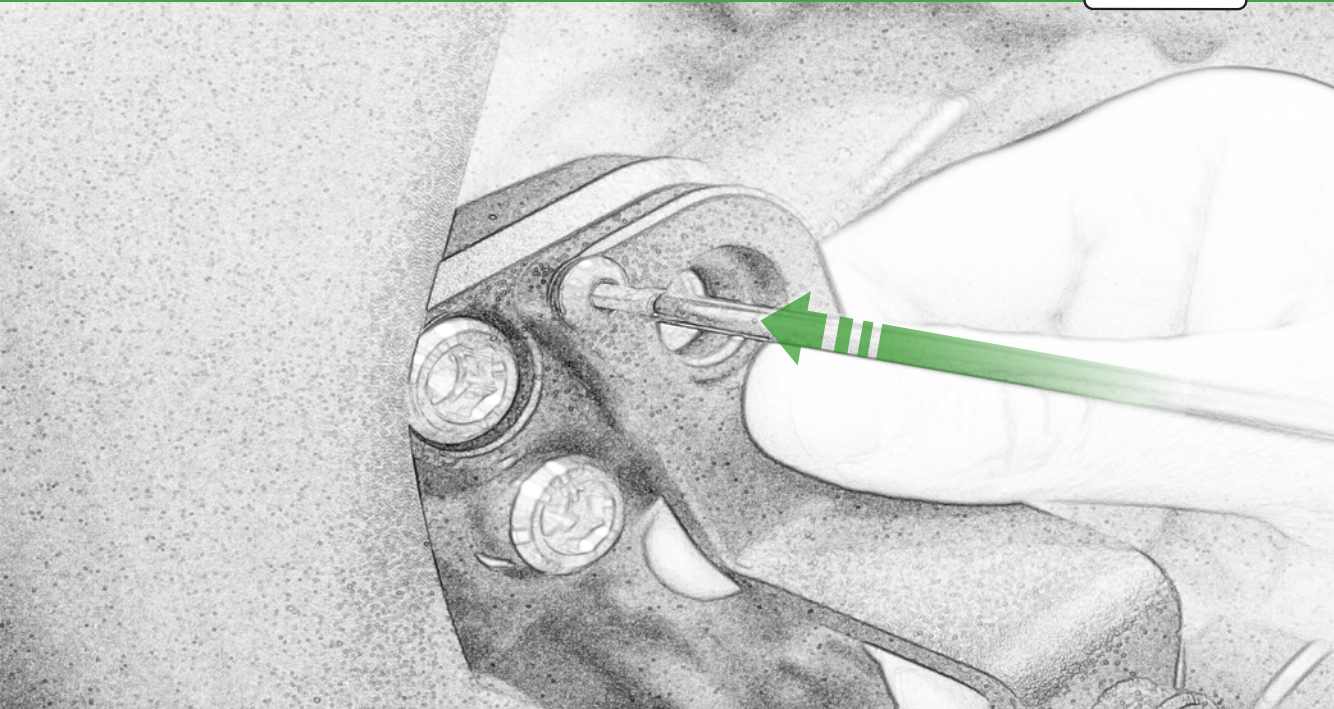


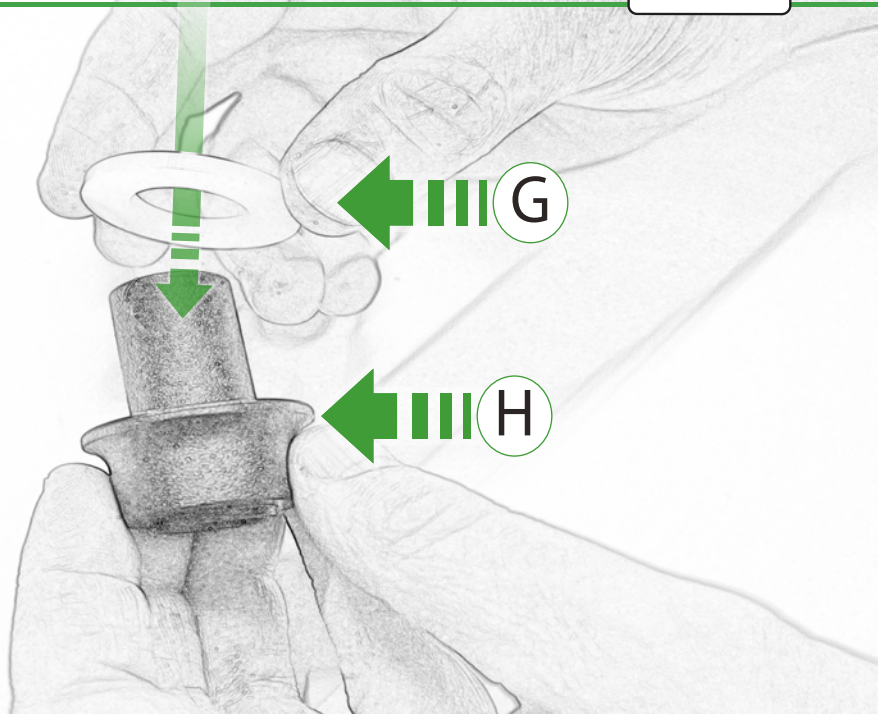


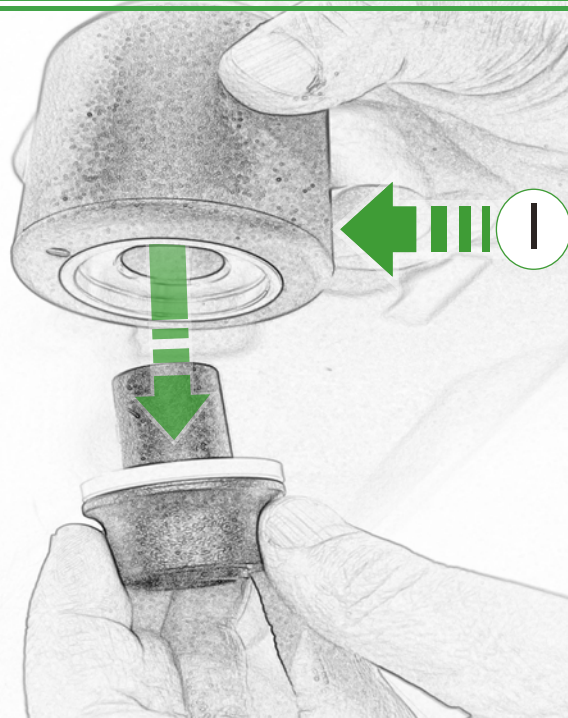



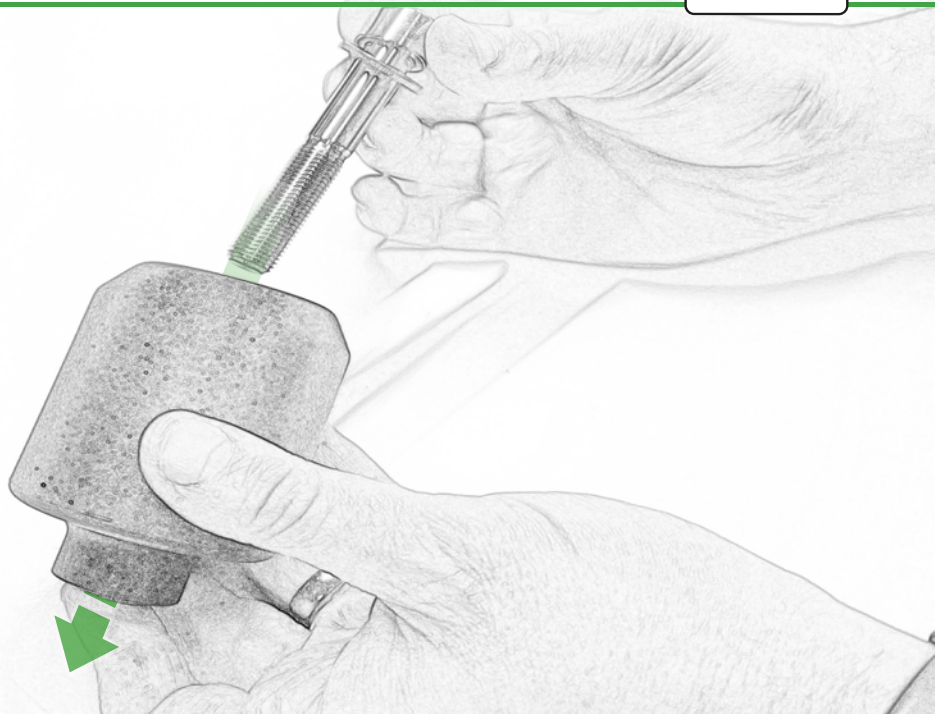


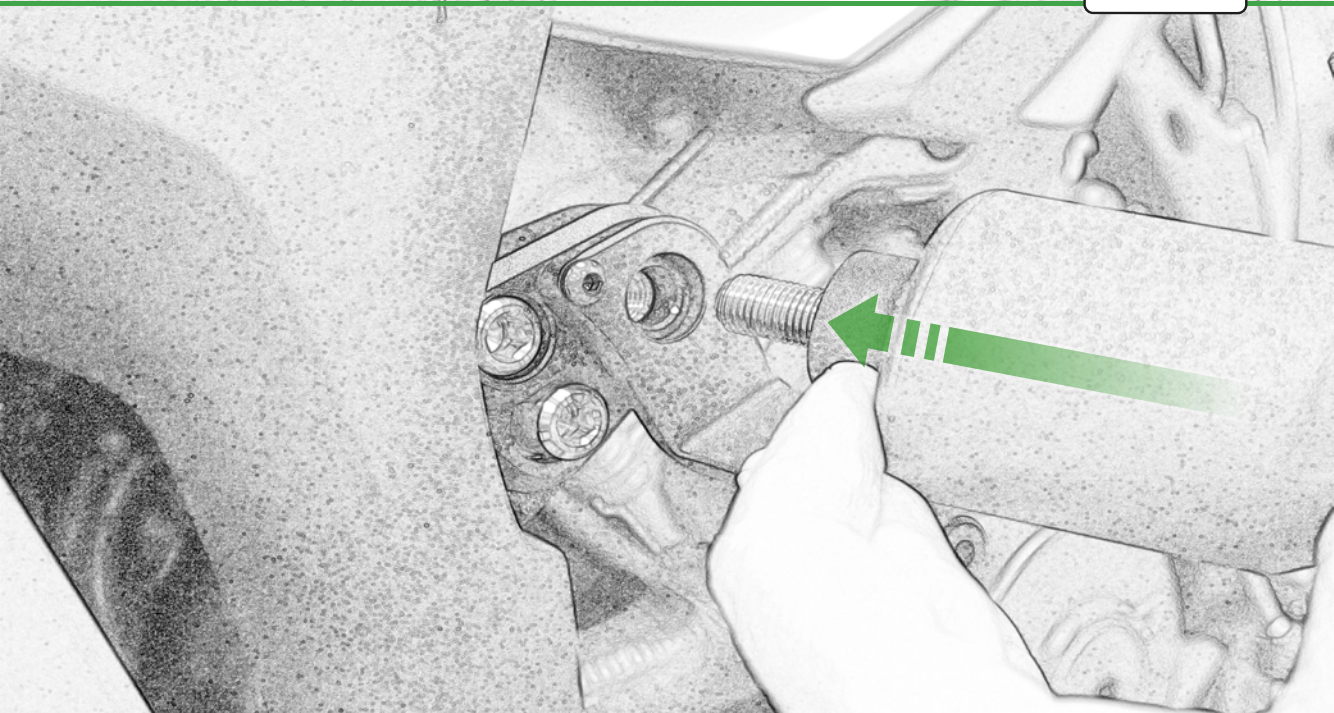


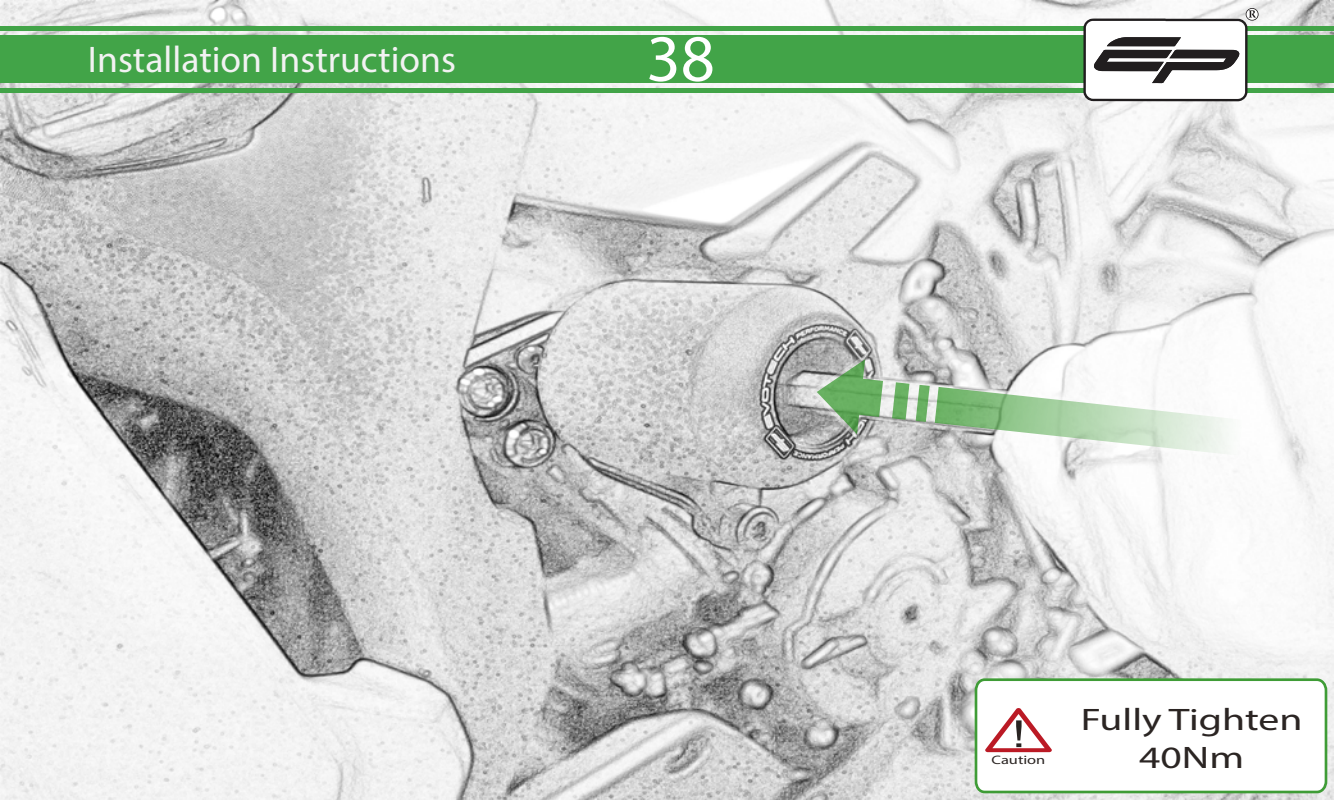


Fully Tighten  
40Nm



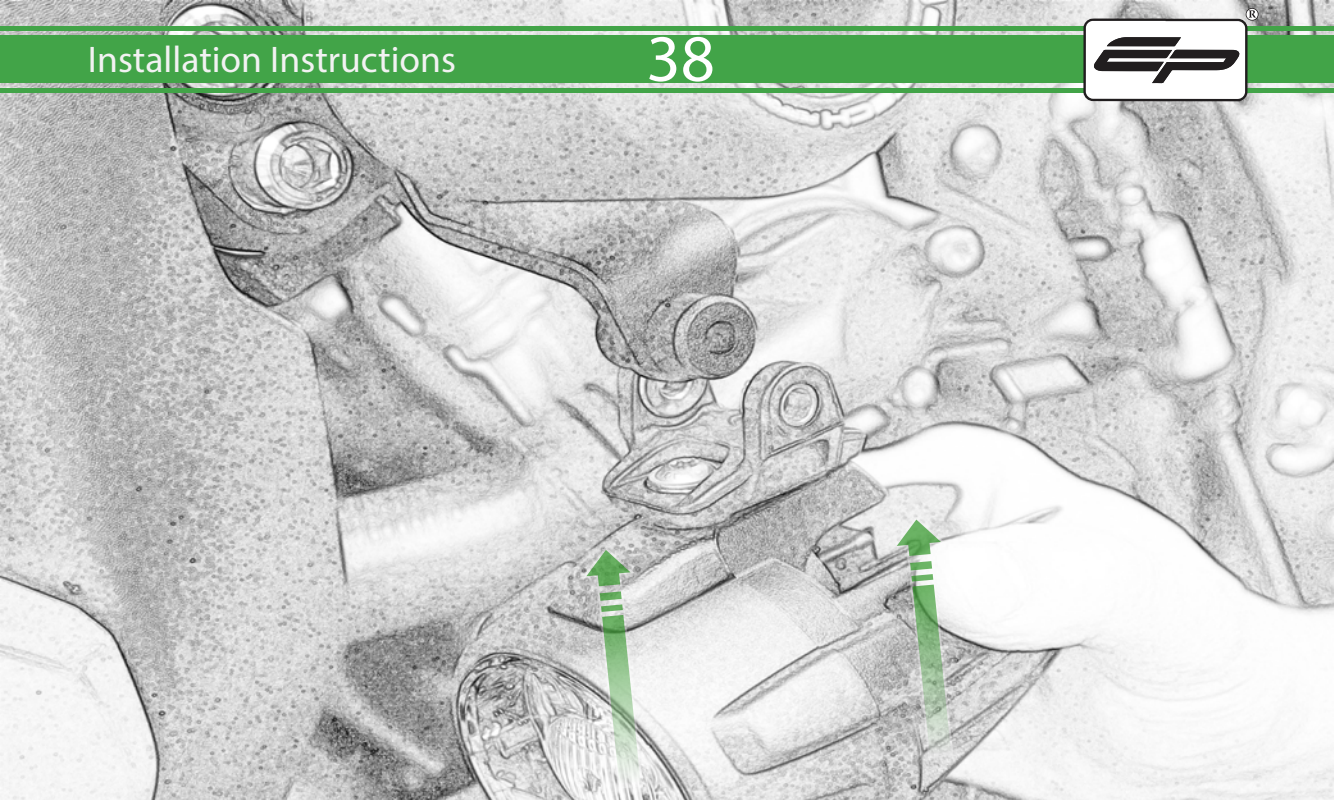

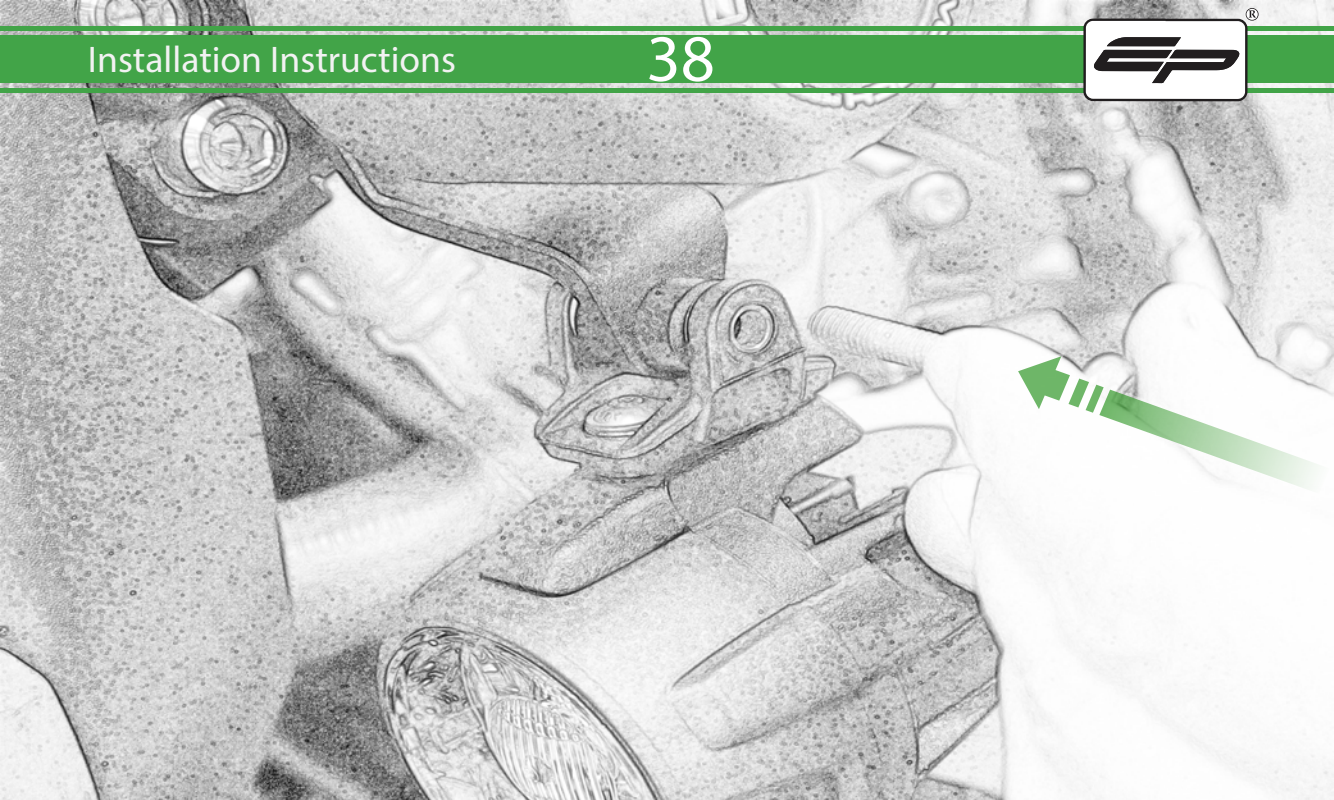



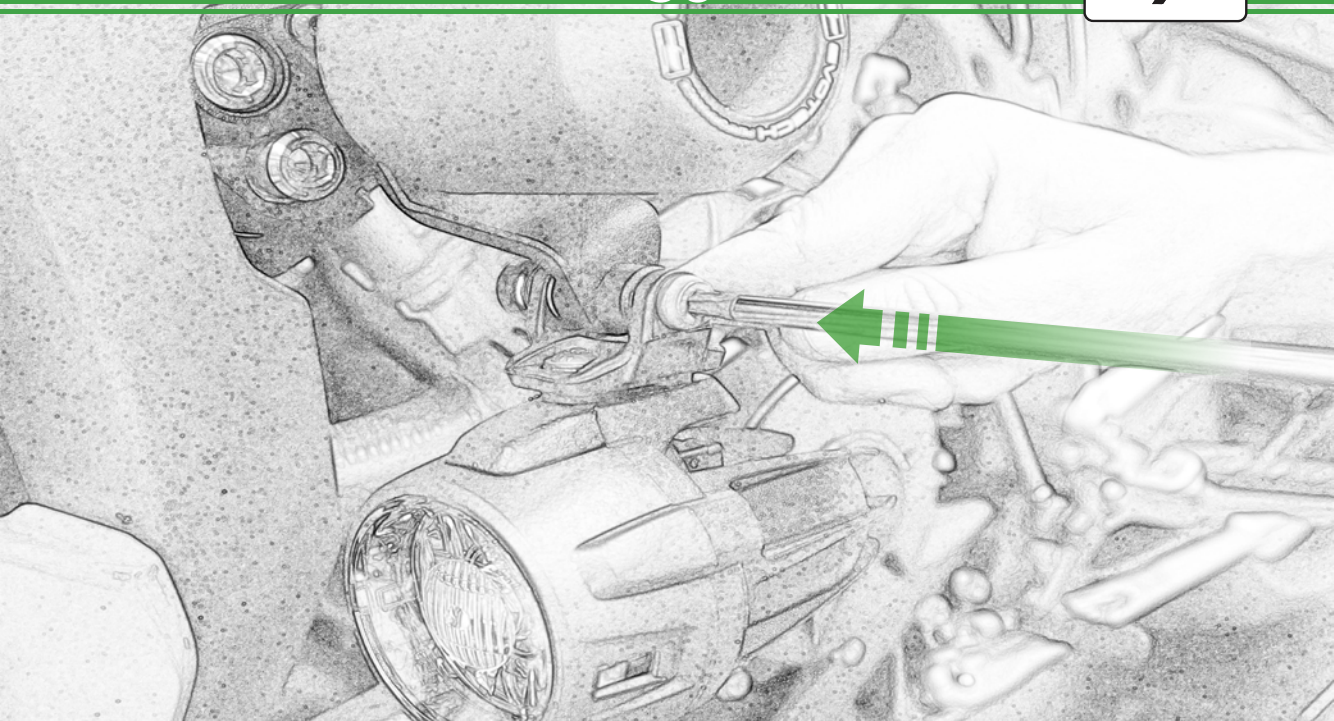



## ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)